












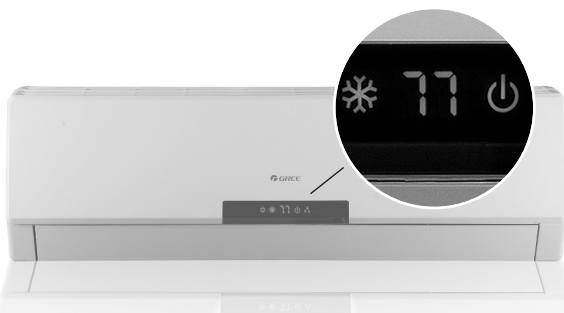


nio HIGH-WALL DUCTLESS AIR CONDITIONING SYSTEM



NOTE: Please read the complete owner's manual carefully before operation.

-  *Press to power the unit on or off.*
-  *Press to select and adjust each mode.*
-  : **COOL** **DRY** **FAN ONLY**
-  *Press to control vertical angle of louvers and to redirect airflow.*
-  *Press to boost cooling or heating capacity. Quickest way to reach preset temperature.*
-  *Press to select fan speed (Auto, Low, Medium or High.) Auto is default.*
-  *Press to raise or lower settings including temperature and time. Press once for slow adjustment, hold down for fast adjustment.*
- 
-  *Press to select one of three SLEEP modes, each offering varying levels of comfort control while sleeping. See Owner's Manual for more details.*
-  *Press to start or stop the timer. (Adjust with "+" and "-" buttons.) See Owner's Manual for more details.*
-  *Press to run fan after cooling cycle to dry off coil and help inhibit growth of bacteria and mildew.*
-  *Press to turn on lights on the unit's Front Panel Display. Press again to turn off.*
-  *Press to set desired room temperature. (Adjust with "+" and "-" buttons.)*



INDOOR UNIT FRONT PANEL DISPLAY: Look here for LED display of system status, setpoint, indoor and outdoor temperatures and malfunction codes.

For complete instructions on these and other functions, as well as important safety information, see the Owners Manual.
For more information, visit GreeComfort.com.



SISTEMA DE AIRE ACONDICIONADO MINI SPLIT INVERTER

Modelos:

RIO09AC115V1A, RIO12AC115V1A


RIO09AC230V1A, RIO12AC230V1A





RIO18CA230V1A, RIO24AC230V1A


NOTA: Por favor lea cuidadosamente el manual del usuario antes de usar el sistema.





PANTALLA DEL PANEL FRONTAL DE LA UNIDAD DE INTERIOR:
Vea aquí la indicación visual LED del estado del sistema, del punto de control, de la temperatura interior y exterior y de los códigos de malfuncionamiento.



-  **ON/OFF** Oprima para encender o apagar la unidad.


-  **MODE** Oprima para seleccionar y ajustar cada modo.
 : **FRIO**  : **SECO**  : **SOLO VENTILADOR**


-  Oprima para controlar el ángulo vertical de las persianas y para redirigir el flujo de aire.


-  **TURBO** Oprima para aumentar la capacidad de enfriamiento. La forma más rápida para alcanzar la temperatura preestablecida.


-  **FAN** Oprima para seleccionar la velocidad del ventilador (Auto, Bajo, Medio o Alto). Auto es la velocidad predeterminada.


-  Oprima para aumentar o disminuir y ajustar la temperatura, el tiempo o la hora.
 Oprima una vez para ajustar lentamente; mantenga presionada la tecla para ajustar más rápidamente.

-  **SLEEP** Oprima para seleccionar uno de los tres modos "sleep" para cuando está durmiendo; cada uno le ofrece varios niveles de control de confort mientras duerme. Consulte el Manual del Usuario para más detalles.

-  **TIMER** Oprima para iniciar o detener el cronómetro (ajústelo con los botones de "+" y "-"). Consulte el Manual del Usuario para ver más detalles.

-  **X-FAN** Oprima para activar el ventilador después del ciclo de enfriamiento para secar el serpentín y ayudar a prevenir el desarrollo de bacterias y hongos.

-  **LIGHT** Oprima para encender las luces en la Pantalla del Panel Frontal de la unidad. Oprima de nuevo para apagarlas.

-  **TEMP** Oprima para ajustar la temperatura deseada en la habitación. (Ajústela con los botones de "+" y "-")

Consulte el Manual del Usuario para obtener instrucciones completas sobre estas y otras funciones, así como información importante sobre seguridad.

Visite greecomfort.com para obtener más información.

