




Air comfort for all

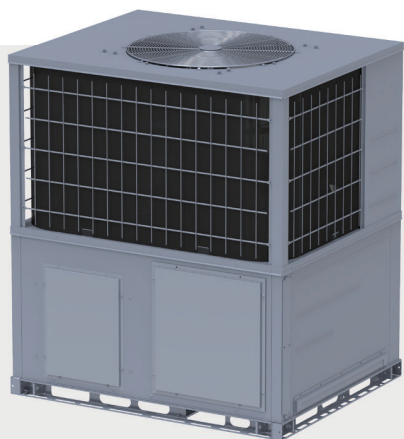

# INSTALLATION MANUAL

## Indoor Unit

### MODELS:

GK-H02TC/NaA-T(U)  
GK-H03TC/NaA-T(U)  
GK-H04TC/NaA-T(U)  
GK-H05TC/NaA-T(U)

Thank you for choosing our product.  
Please read this Owner's Manual carefully before  
operation and retain it for future reference.

To download an electric version of this manual visit  
<https://gree-comfort-dev.web.app/system-documentation/>

## To Users

Thank you for selecting our product. Please read this instruction manual carefully before installing and using the product, so as to master and correctly use the product. In order to guide you to correctly install and use our product and achieve expected operating effect, we hereby instruct as below:

- (1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- (2) In order to ensure reliability of product, the product may consume some power under stand-by status for maintaining normal communication of system and preheating refrigerant and lubricant. If the product is not to be used for long, cut off the power supply; please energize and preheat the unit in advance before reusing it.
- (3) Please properly select the model according to actual using environment, otherwise it may impact the using convenience.
- (4) This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function.
- (5) If the product needs to be installed, moved or maintained, please contact our designated dealer or local service center for professional support. Users should not disassemble or maintain the unit by themselves, otherwise it may cause relative damage, and our company will bear no responsibilities.
- (6) All the illustrations and information in the instruction manual are only for reference. In order to make the product better, we will continuously conduct improvement and innovation. If there is adjustment in the product, please subject to actual product.

# Exception Clauses

Manufacturer will bear no responsibilities when personal injury or property loss is caused by the following reasons:

- (1) Damage the product due to improper use or misuse of the product.
- (2) Alter, change, maintain or use the product with other equipment without abiding by the instruction manual of manufacturer.
- (3) After verification, the defect of product is directly caused by corrosive gas.
- (4) After verification, defects are due to improper operation during transportation of product.
- (5) Operate, repair, maintain the unit without abiding by instruction manual or related regulations.
- (6) After verification, the problem or dispute is caused by the quality specification or performance of parts and components that produced by other manufacturers.
- (7) The damage is caused by natural calamities, bad using environment or force majeure.

# Contents

<b>1 Safety Precautions</b> .....	<b>1</b>
<b>2 Product Introduction</b> .....	<b>4</b>
2.1 Product Description .....	4
2.2 Operating Range .....	4
2.3 Standard Accessory Parts .....	5
<b>3 Installation</b> .....	<b>5</b>
3.1 Installation Preparation .....	5
3.2 Unit Installation .....	10
3.3 Ductwork .....	19
3.4 Electric Heater .....	20
3.5 Electrical Installation .....	22
3.6 Wiring Diagram .....	25
3.7 Engineering Wiring Diagram .....	27
3.8 Check after Installation .....	27
3.9 Test Running .....	27
<b>4 Troubleshooting</b> .....	<b>28</b>
<b>5 Code List</b> .....	<b>29</b>
<b>6 Maintenance</b> .....	<b>31</b>
6.1 Cleaning the Air Filter .....	31
6.2 Drainage Pipe .....	31
6.3 Cleaning the Heat Exchanger .....	31
6.4 Notice before Seasonal Use .....	32
6.5 Maintenance after Seasonal Use .....	32
6.6 Parts Replacement .....	32
<b>7 After-sales Service</b> .....	<b>32</b>
<b>8 Wired Controller X117 Owners Manual</b> .....	<b>33</b>


This marking indicates that this product should not be disposed with other household wastes throughout the North America. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.



# 1 Safety Precautions

## **WARNING**

This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function.

Improper installation, adjustment, alteration, service, maintenance, or use can cause explosion, fire, electrical shock, or other conditions which may cause death, personal injury, or property damage. Consult a qualified installer, service agency, or your distributor or branch for information or assistance. The qualified installer or agency must use factory--authorized kits or accessories when modifying this product. Refer to the individual instructions packaged with the kits or accessories when installing. Follow all safety codes. Wear safety glasses, protective clothing, and work gloves. Use quenching cloth for brazing operations. Have fire extinguisher available. Read these instructions thoroughly and follow all warnings or cautions included in literature and attached to the unit. Consult local building codes and National Electrical Code (NEC) for special requirements. Recognize safety information. This is the safety--alert symbol .

When you see this symbol on the unit and in instructions or manuals, be alert to the potential for personal injury. Understand these signal words: **DANGER**, **WARNING**, **CAUTION** and **NOTICE**. These words are used with the safety--alert symbol.

## **DANGER**

Indicates a hazardous situation that, if not avoided, will result in death or serious injury.

## **WARNING**

Indicates a hazardous situation that, if not avoided, could result in death or serious injury.

## **CAUTION**

Indicates a hazardous situation that, if not avoided, may result in minor or moderate injury.

## **NOTICE**

Indicates important but not hazard-related information, used to indicate risk of property damage.

**Electrical shock hazard:**

Failure to follow this warning could result in personal injury or death.

Before installing, modifying, or servicing system, main electrical disconnect switch must be in the OFF position. There may be more than 1 disconnect switch. Lock out and tag switch with a suitable warning label.

<b>⚠ WARNING</b>	
(1)	The air conditioner should be grounded to avoid electric shock. Do not connect the ground wire to gas pipe, water pipe, lightning arrester or telephone wire.
(2)	The appliance shall be stored in a well-ventilated area where the room size corresponds to the room area as specified for operation.
(3)	The appliance shall be stored in a room without continuously operating open flames (for example an operating gas appliance) and ignition sources (for example an operating electric heater).
(4)	According to federal/state/local laws and regulations, all packages and transportation materials, including nails, metal or wooden parts, and plastic packing material, must be treated in a safe way.
(5)	The air conditioner should be at least 1.5m away from any inflammable surface.
(6)	The range of external static pressures(0-0.8 Inches W.C.) at which the appliance was tested(add-on heat pumps and ducted appliances with supplementary heaters only).

<b>⚠ WARNING</b>	
(1)	Please install according to this instruction manual. Installation must be performed in accordance with the requirement of NEC and CEC by authorized personnel only.
(2)	Any person who is involved with working on or breaking into a refrigerant circuit should hold a current valid certificate from an industry-accredited assessment authority, which authorizes their competence to handle refrigerants safely in accordance with an industry recognized assessment specification.
(3)	Servicing shall only be performed as recommended by the equipment manufacturer.
(4)	The appliance shall be installed in accordance with national wiring regulations.
(5)	The fixed wires connecting to the appliance must be configured with all-pole disconnection device under voltage grade III according to wiring rules.
(6)	Air conditioner should be stored with protective measures against mechanical damage caused by accident.
(7)	During installation, use the specialized accessories and components, otherwise water leakage, electric shock or fire hazard may occur.
(8)	Please install the air conditioner in a secure place that can withstand the weight of air conditioner. Insecure installation may cause the air conditioner falling down and lead to injury.

**⚠ WARNING**

- (9) Be sure to adopt independent power circuit. If the power cord is damaged, it must be repaired by the manufacturer, service agent or other professional agents.
- (10) The air conditioner can be cleaned only after it is turned off and power-disconnected, otherwise electric shock may occur.
- (11) The air conditioner is not intended to be cleaned or maintained by children without supervision.
- (12) Do not alter the setting of pressure sensor or other protective devices. If the protective devices are short-circuited or changed against rules, fire hazard or even explosion may occur.
- (13) Do not operate the air conditioner with wet hands. Do not wash or sprinkle water on the air conditioner, otherwise malfunction or electric shock will occur.
- (14) Do not dry the filter with naked flame or an air blower; otherwise the filter will be out of shape.
- (15) If the unit is to be installed in a small space, please adopt protective measures to prevent the concentration of refrigerant from exceeding the allowable safety limit; excessive refrigerant leakage may lead to explosion.

**NOTICE**

- (1) Do not put a finger or other objects into the air inlet or return air grill.
- (2) Please adopt safety protection measures before touching the refrigerant pipe; otherwise your hands may be hurt.
- (3) Please arrange the drain pipe according to the instruction manual.
- (4) Never stop the air conditioner by directly cutting off the power.
- (5) Never install the air conditioner in the following places:
  - a) Places with oil smoke or volatile liquid: plastic parts may deteriorate and fall off or even cause water leakage.
  - b) Places with corrosive gas: copper pipe or the welding parts may be corroded and cause refrigerant leakage.
- (6) Adopt proper measures to protect the air conditioner from small animals because they may damage the electric components and cause malfunction of the air conditioner.

**NOTICE**

- (1) If thermostat is to be used, it should be connected first before powering up the unit, otherwise the thermostat may not be able to use.
- (2) Only use soft dry cloth or slightly wet cloth with neutral detergent to clean the casing of the air conditioner.
- (3) Before operating the unit under low temperature, connect it to power for 8 hours. If it is stopped for a short time, for example, one night, do not cut off the power (This is to protect the compressor).

## **NOTICE**

- (4) In order to ensure the reliability of the compressor, the unit force the compressor run for at least 6 minutes every time the compressor turns on, regardless of the room temperature. Therefore, it is necessary to select a thermostat having the minimum run time for the compressor or delaying a few minutes to turn the indoor unit off after the outdoor unit is shut down or stopped at the temperature point, in order to avoid that the indoor unit is turned off by the thermostat while the out unit is running which can result in the malfunction of the air conditioner.

## 2 Product Introduction

### 2.1 Product Description

The unit is completely assembled, piped and wired at the factory to provide one-piece shipment and rigging. Each unit is pressurized with a holding charge of R410A for storage and shipping.

The compact design, attractive appearance, outstanding anti-rust cabinet and quiet operation make these units suitable for homes, offices, restaurants, residences or similar places.

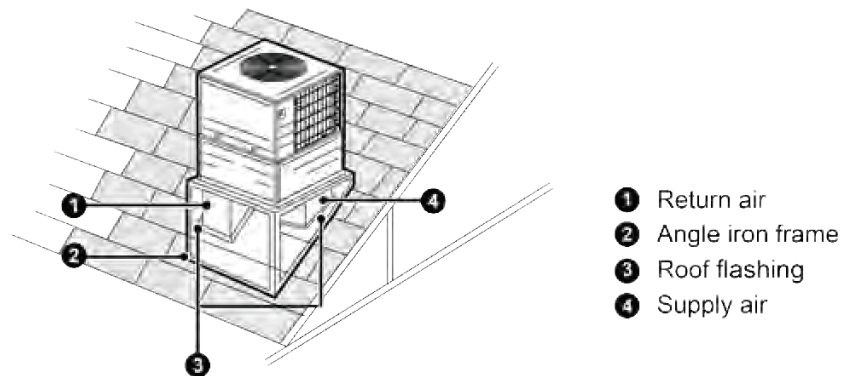



Fig.1

### 2.2 Operating Range

Mode	Outdoor Condition (DB Temperature )
Cooling	23°F(-5°C) ~ 125°F (52°C)
Heating	-22°F (-30°C) ~ 75.2°F (24°C)

## 2.3 Standard Accessory Parts

The standard accessory parts listed below are furnished and should be used as required.

No.	Name	Appearance	Q'ty	Usage
1	Wired controller		1	To control the unit

## 3 Installation

### 3.1 Installation Preparation

#### 3.1.1 Checking Product Received

After receiving the product, please check if there is any damage caused by transportation. Shipping damage is the responsibility of the carrier. Verify the model number, specifications and accessories are correct prior to installation. The distributor or manufacturer will not accept claims from dealers for transportation damage or installation of incorrectly shipped units.

#### 3.1.2 Before Installation

Carefully read all instructions for the installation prior to installing product. Make sure each step or procedure is understood and any special considerations are taken into account before starting installation. Assemble all tools, hardware and supplies needed to complete the installation. Some items may need to be purchased locally. Make sure everything needed to install the product is on hand before starting.


#### 3.1.3 Codes & Regulations

This product is designed and manufactured to comply with national codes. It is installer's responsibilities to install the product in accordance with such codes and/or any prevailing local codes/regulations. The manufacturer assumes no responsibilities for equipment installed in violation of any codes or regulations.

#### 3.1.4 Replacement Parts

When reporting shortages or damages, or ordering repair parts, give the complete product model and serial numbers as stamped on the product. Replacement parts for this product are available through your contractor or local distributor.

### 3.1.5 Selection of Installation Location

 <b>WARNING</b>	
①	The unit must be installed where strong enough to withstand the weight of the unit and fixed securely, otherwise the unit would topple or fall off.
②	Do not install where there is the danger of combustible gas leakage.
③	Do not install the unit at a place with leakage of inflammable gas.

Selection of installation location (Select a location pursuant to the following condition).

- (1) Noise and air flow produced by the air conditioner will not disturb the neighbors.
- (2) Select a location that is safe and away from animals and plants. If not, please add safety fences to protect the unit.
- (3) Install at a place with good ventilation. Make sure the air conditioner stays at a well-ventilated place with no obstacles nearby that may obstruct the air inlet and outlet.
- (4) The installation location should be able to withstand the weight and vibration of air conditioner and allow the installation to be carried out safely.
- (5) Avoid installing at a place with leakage of inflammable gas, oil smoke or corrosive gas.
- (6) Keep it away from strong wind because strong wind will affect the condenser fan and lead to insufficient air flow volume and thus affecting the unit's performance.
- (7) Away from any object that may get the air conditioner generating noise.
- (8) Install the air conditioner at a place where condensate can be easily drained.
- (9) Do not install the air conditioner near the bedroom, otherwise the noise of the unit operation may disturbing to building occupants.
- (10) Do not install the air conditioner where water, ice or snow from overhang or roof may damage or flood the unit.



Fig.2

(11) Do not install the air conditioner in a corrosive environment, otherwise it may shorten the life, or negatively affect the performance of the unit.

(12) Installation requirements in snowy areas:

- a) Install the air conditioner on a stand which more than 20 in.(500mm) higher than the expected snow fall to prevent it from being covered by snow.
- b) Attach snow hood and snow guard.
- c) Do not install the air conditioner at a place where a snowdrift is generated.
- d) Remove the air inlet grille to prevent snow from accumulating on it.

Unit:inch(mm)

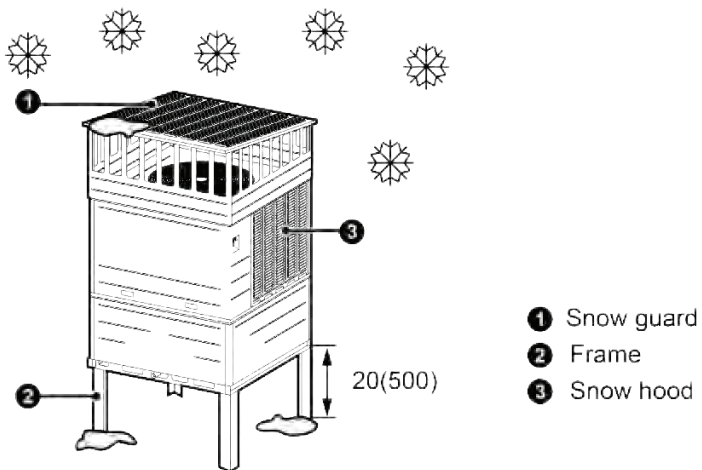


Fig.3

3.1.6 Physical Dimension

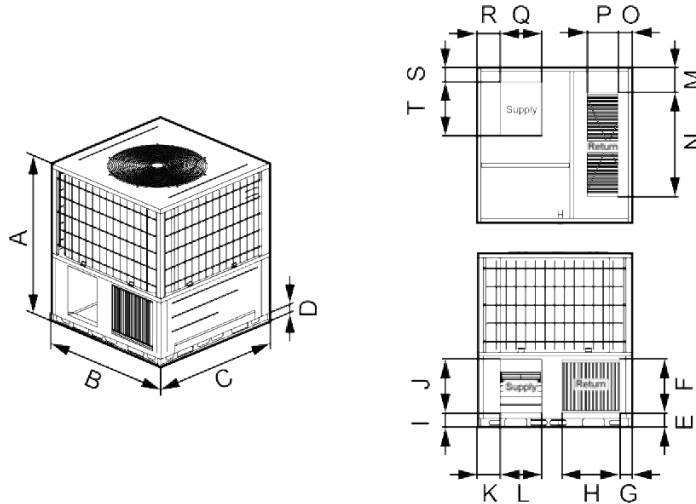


Fig.4

Unit:inch(mm)

Dimension	A	B	C	D				
	49-1/4 (1250)	44 (1120)	44 (1120)	2-1/2 (65)				
Side air vents								
	E	size of air return		G	I	size of air supply		K
		F	H			J	L	
GK-H05TC/NaA-T(U) GK-H04TC/NaA-T(U)	4 (101)	15-3/8 (390)	16-1/2 (420)	3-3/8 (87)	4 (101)	15-3/8 (390)	11-3/4 (300)	6-1/2 (166)
Bottom air vents								
	M	size of air return		O	R	size of air supply		S
		N	P			Q	T	
	7-7/8 (199)	28 (711)	9 (228)	3-3/4 (96)	6-1/2 (166)	11-3/4 (300)	15-3/8 (390)	4 (103)

Dimension	A	B	C	D				
	49-1/4 (1250)	44 (1120)	35-7/16 (900)	2-1/2 (65)				
Side air vents								
	E	size of air return		G	I	size of air supply		K
		F	H			J	L	
GK-H03TC/NaA-T(U) GK-H02TC/NaA-T(U)	4-7/16 (113)	17-8/16 (445)	16-9/16 (420)	3-7/16 (87)	3-15/16 (101)	15-6/16 (390)	11-13/16 (300)	6-3/16 (157)
Bottom air vents								
	M	size of air return		O	R	size of air supply		S
		N	P			Q	T	
	5-14/16 (149)	23-1/16 (586)	8-10/16 (219)	3-11/16 (93)	6-3/16 (156)	11-14/16 (302)	13-12/16 (350)	3-10/16 (92)

**NOTE:** Above diagrams may be different from actual mode.

### 3.1.7 Names of Main Parts

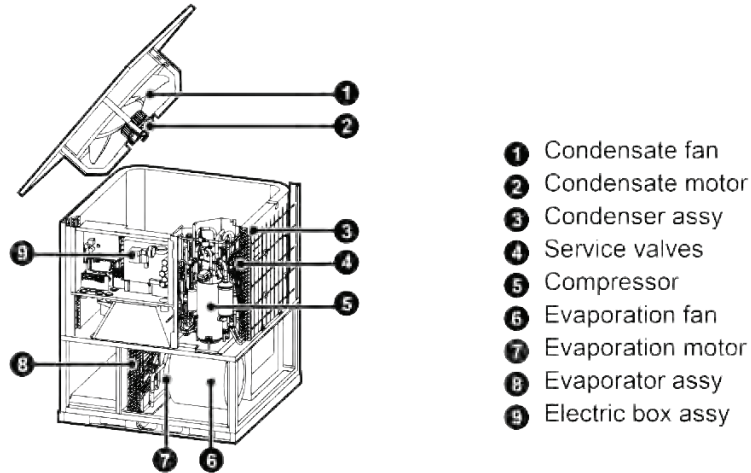


Fig.5

### 3.1.8 Diagram of Unit Installation Space and Location

Diagram of installation space and location (Notice: for best performance of the unit, make sure its installation space conforms to the following installation dimensions).

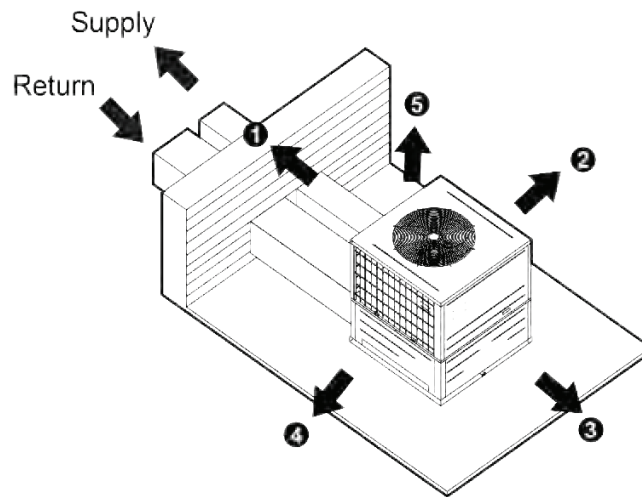


Fig.6

**NOTE:** Above diagrams may be different from actual model.

DIMENSION(Minimum)	Installation Clearances	
	inch	mm
1	24	610
2	8	203
3	20	508
4	24	610
5	60	1524

**NOTE:** Refer to local code requirements for additional clearance requirements.

## 3.2 Unit Installation

### 3.2.1 Curb-mounted installation

- ① Install curb.

**NOTE:** The manufacturer does not supply roof curb. Please refer to Figure 7 for roof curb reference dimensions.

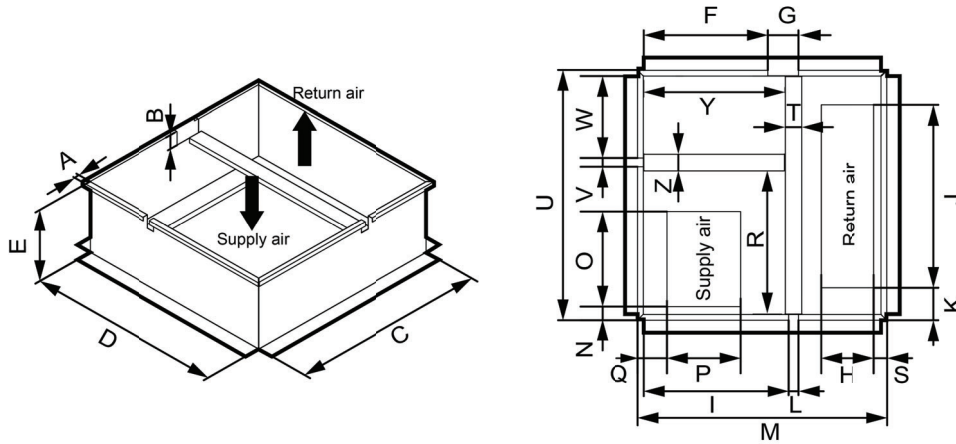


Fig.7 GK-H02TC/NaA-T(U), GK-H03TC/NaA-T(U),  
GK-H04TC/NaA-T(U), GK-H05TC/NaA-T(U)

Unit:inch(mm)

Dimension	A	B	C	D	E
GK-H05TC/NaA-T(U)	1	2-11/16	38-7/16	38-7/16	14
GK-H04TC/NaA-T(U)	(25)	(68)	(976)	(976)	(356)
GK-H03TC/NaA-T(U)	1	2-11/16	38-7/16	29-3/4	14
GK-H02TC/NaA-T(U)	(25)	(68)	(976)	(756)	(356)

Dimension	F	G	H	I	J
GK-H05TC/NaA-T(U)	20	5	8-3/4	23-1/4	29-1/2
GK-H04TC/NaA-T(U)	(506)	(125)	(223)	(590)	(750)
GK-H03TC/NaA-T(U)	20	5	8-5/8	23-1/4	23
GK-H02TC/NaA-T(U)	(506)	(125)	(219)	(590)	(586)

Dimension	K	L	M	N	O
GK-H05TC/NaA-T(U)	5-1/4	1-9/16	40-3/8	2-3/16	15-3/8
GK-H04TC/NaA-T(U)	(133)	(40)	(1026)	(56)	(390)
GK-H03TC/NaA-T(U)	4	1-9/16	40-3/8	1-3/4	13-3/4
GK-H02TC/NaA-T(U)	(102)	(40)	(1026)	(45)	(350)

## DC Inverter Rooftop Packaged Air Conditioner

Dimension	P	Q	R	S	T
GK-H05TC/NaA-T(U)	11-13/16	4-11/16	23-1/8	2-3/16	2-3/4
GK-H04TC/NaA-T(U)	(300)	(119.5)	(588)	(55)	(70)
GK-H03TC/NaA-T(U)	11-7/8	4-1/4	16-7/16	1-3/4	2-3/4
GK-H02TC/NaA-T(U)	(302)	(109)	(418)	(46)	(70)

Dimension	U	V	W	Z	Y
GK-H05TC/NaA-T(U)	40-3/8	1-7/16	13-3/16	2-3/4	22-5/8
GK-H04TC/NaA-T(U)	(1026)	(36)	(335)	(70)	(575)
GK-H03TC/NaA-T(U)	31-3/4	1-7/16	11-1/4	2-3/4	22-5/8
GK-H02TC/NaA-T(U)	(806)	(36)	(285)	(70)	(575)

- ② Field fabricate ductwork inside curb. Secure supply and return ducts to roof curb and building structure.
- ③ Rig and place unit.
- ④ Convert unit to vertical duct connection.
- ⑤ Install condensate drain piping.
- ⑥ Make electrical connections.

### 3.2.2 Pad-mounted installation

- ① Prepare pad and unit supports.
- ② Rig and place unit.
- ③ Convert unit to horizontal duct connection.
- ④ Field fabricate ductwork at unit duct openings.
- ⑤ Install condensate drain piping.
- ⑥ Make electrical connections.

### 3.2.3 Rigging and Lifting

Do not remove the unit's package materials before installation. Keep unit upright and do not drop. Rig the unit by attaching chain or cable slings to the lifting holes in base rails.

Place the unit on roof curb and maintain the clearance between the roof curb and the base rail inside at 1/4inch. (6.4mm)

After unit is position, remove rigging skids and package materials.

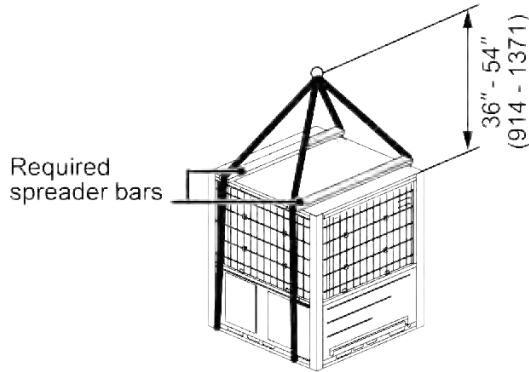


Fig.8

**NOTICE**

(1)	Spreader bars must required in order to prevent rigging straps from damaging unit.
(2)	All panels must be in place when rigging.
(3)	The height between the top of unit and the rigging cables' connection point should be 36-54inch (914-1371mm).

3.2.4 Horizontal duct and Vertical duct conversation

To convert to horizontal duct configuration, remove screws from side duct opening covers (see Fig. 9) and remove covers.

To convert to vertical duct configuration, remove screws from basepan duct opening covers (see Fig. 10) and remove covers.

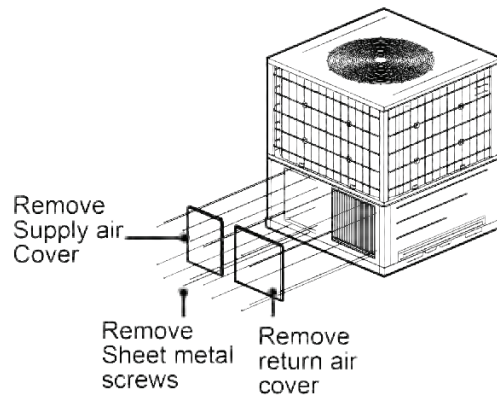


Fig.9 horizontal duct

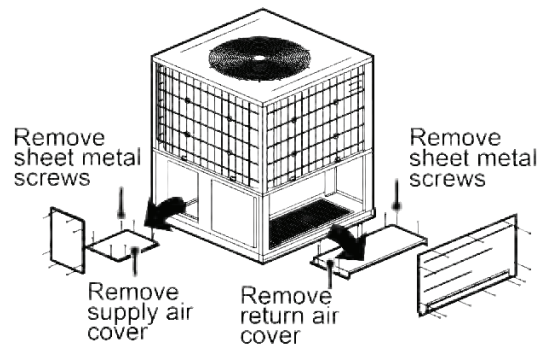


Fig.10 vertical duct

### 3.2.5 Installation of Condensate Pipe

- (1) Condensate drain side is pitched lower than the opposite side. (see Fig. 11)
- (2) When shipped out from factory, both the condensate outlets are blocked by rubber plug. So before installation, please take the rubber plug out.
- (3) Condensate removal is performed by attaching a PVC pipe to the drain pan and terminated in accordance with local or state Plumbing/HVAC codes.
- (4) The condensate pipe shall be installed with an inclining angel of 5~10°, so as to facilitate the drainage of condensate.
- (5) As the inside of the unit is in the negative pressure status, it is required to set up a backwater elbow. The requirements is:  $A=B \geq P/10+20(\text{mm})$
- (6) P is the absolute pressure inside the unit. The unit of the pressure is Pa.
- (7) After the electrical installation is completed, carry out the testing of the drainage system.
- (8) It is not allowed to connect the condensate drain pipe into waste pipe or other pipelines which are likely to produce corrosive or peculiar smell to prevent the smell from entering indoors or corrupt the unit.
- (9) It is not allowed to connect the condensate drain pipe into rain pipe to prevent rain water from pouring in and cause property loss or personal injury.
- (10) Condensate drain pipe should be connected into special drain system for air conditioner.
- (11) Drain hose is in negative pressure state:  $A = B \geq P/10+13/16 "$  (20mm).
- (12) Drain hose is in positive pressure state:  $A \geq 1-13/16 "$  (30mm) ,

## XPAC 24 Volt Thermostat Operation

SA1 Dip Switches are for setting Blower Speed. If a GREE wired controller is used the SA1 dip switches get set to 0000 or all off. The blower speed profile is then set by the controller.

24 Volt Thermostat the SA1 blower dip switches must be set for proper air flow and if the dip switches are left at 0000 an E6 error code will be produced when trying to use a 24 Volt Thermostat. Blower set up is in the installation manual.

IF The SA1 Dip Switches are left as 0000 and a 24 volt thermostat is used then an E6 error code will be produced

When the unit is connected to the thermostat, the dip switch SA1 is not 0000. Setting different positions of the dip switch is correspond to different speeds, and each combination is correspond to a speed. The relationship between combination and speeds are as follows:

Level	Dip switch SA1			
	4	3	2	1
Speed 4	0	1	0	0
Speed 5	0	1	0	1
Speed 6	0	1	1	0
Speed 7	0	1	1	1
Speed 8	1	0	0	0
Speed 9	1	0	0	1
Speed 10	1	0	1	0
Speed 11	1	0	1	1
Speed 12	1	1	0	0
Speed 13	1	1	0	1

NOTE: 0 means dip switch to “on”, 1 means dip switch to number.

$B \geq P/10 + 13/16$  " (20mm).

Unit:inch(mm)

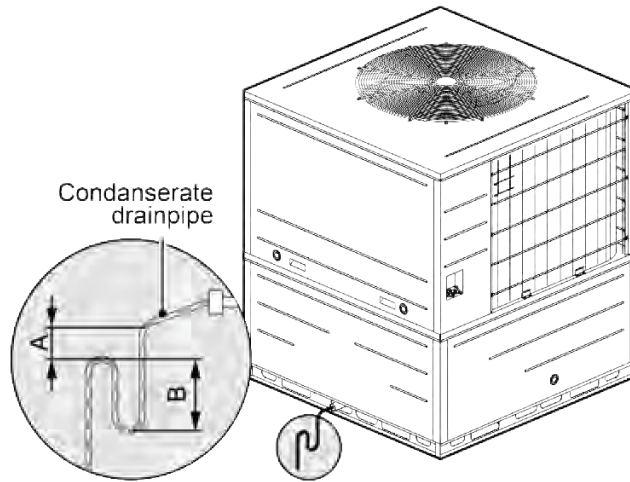


Fig.11

Model	Drain connection size(inch)
GK-H02TC/NaA-T(U)	3/4"(NPT)
GK-H03TC/NaA-T(U)	
GK-H04TC/NaA-T(U)	
GK-H05TC/NaA-T(U)	

### 3.2.6 Dip Switch Instruction

The unit can be connected to a wired controller or a thermostat, and only one of them can be connected. When the dip switch SA1 is 0000, the operation command of the wired controller is valid for the unit; When the dip switch SA1 is not 0000, the thermostat operation command is valid for the unit and it is not support to the unit connected to the centralized controller.

The unit is equipped with a wired controller as standard, and the default setting of the dip switch SA1 is 0000. When it is necessary to replace the thermostat, the dip switch SA1 should be dialed according to the required speed when the air conditioner is powered off.

#### 3.2.6.1 Fan Speed Adjustment Guidance

When the wired controller connected with the unit (dip switch SA1:0000), different static pressure levels can be adjusted, and the fan speeds of different static pressure levels are as follows:

Static pressure level	Super	High	Middle	Low
04	Speed 8	Speed 6	Speed 5	Speed 4

Static pressure level	Super	High	Middle	Low
05	Speed 9	Speed 7	Speed 6	Speed 5
06	Speed 10	Speed 8	Speed 7	Speed 6
07	Speed 11	Speed 9	Speed 8	Speed 7
08	Speed 12	Speed 10	Speed 9	Speed 8
09	Speed 13	Speed 11	Speed 10	Speed 9

The default static pressure level from factory of the unit is 05, different static pressure levels can be adjusted according to the need. When the unit is off , pressing the "FUNCTION" and "TIMER" button at the same time for 5 seconds can enter the system debugging function. Then pressing the "MODE" button adjust the static pressure level to make the center of the wired controller's display interface show 11, and then pressing "▲" or "▼" button to show different numbers (01, 02, 03, 04, 05, 06, 07, 08, 09) on the lower right corner of the wired controller's display interface. After selecting the appropriate static pressure according to the required speed, the setting confirmed from pressing the "SWING/ENTER" button.

When the unit is connected to the thermostat, the dip switch SA1 is not 0000. Setting different positions of the dip switch is correspond to different speeds, and each combination is correspond to a speed. The relationship between combination and speeds are as follows:

Level	Dip switch SA1			
	4	3	2	1
Speed 4	0	1	0	0
Speed 5	0	1	0	1
Speed 6	0	1	1	0
Speed 7	0	1	1	1
Speed 8	1	0	0	0
Speed 9	1	0	0	1
Speed 10	1	0	1	0
Speed 11	1	0	1	1
Speed 12	1	1	0	0
Speed 13	1	1	0	1

**NOTE:** 0 means dip switch to 'on', 1 means dip switch to number.

### 3.2.6.2 Fan Performance Data

External static pressure should stay within the minimum and maximum limits

## DC Inverter Rooftop Packaged Air Conditioner

shown in the table below in order to ensure proper operation of both cooling, heating, and electric heating operation.

Model	GK-H05TC/NaA-T(U),GK-H04TC/NaA-T(U)								
Level	Static pressure:Inches W.C.(Pa)								
	0 (0)	0.1 (25)	0.2 (50)	0.3 (75)	0.4 (100)	0.5 (125)	0.6 (150)	0.7 (175)	0.8 (200)
Speed 4 (CFM)	1517	/	/	/	/	/	/	/	/
Speed 5 (CFM)	-	1464	/	/	/	/	/	/	/
Speed 6 (CFM)	-	1533	/	/	/	/	/	/	/
Speed 7 (CFM)	-	-	1517	/	/	/	/	/	/
Speed 8 (CFM)	-	-	1533	/	/	/	/	/	/
Speed 9 (CFM)	-	-	-	1525	/	/	/	/	/
Speed 10 (CFM)	-	-	-	-	1517	/	/	/	/
Speed 11 (CFM)	-	-	-	-	-	1558	1492	/	/
Speed 12 (CFM)	-	-	-	-	-	1566	1525	1480	/
Speed 13 (CFM)	-	-	-	-	-	1591	1538	1497	1470

Model	GK-H03TC/NaA-T(U),GK-H02TC/NaA-T(U)								
Level	Static pressure:Inches W.C.(Pa)								
	0 (0)	0.1 (25)	0.2 (50)	0.3 (75)	0.4 (100)	0.5 (125)	0.6 (150)	0.7 (175)	0.8 (200)
Speed 4 (CFM)	1216	-	-	-	-	-	-	-	-
Speed 5 (CFM)	1293	-	-	-	-	-	-	-	-
Speed 6 (CFM)	1368	1264	-	-	-	-	-	-	-
Speed 7 (CFM)	1447	1348	1230	-	-	-	-	-	-
Speed 8 (CFM)	1501	1436	1327	1195	-	-	-	-	-
Speed 9 (CFM)	1506	1464	1417	1383	-	-	-	-	-
Speed 10 (CFM)	1498	1466	1423	1378	1280	-	-	-	-
Speed 11 (CFM)	1514	1472	1424	1385	1344	1303	-	-	-

Model	GK-H03TC/NaA-T(U),GK-H02TC/NaA-T(U)								
Level	Static pressure:Inches W.C.(Pa)								
	0 (0)	0.1 (25)	0.2 (50)	0.3 (75)	0.4 (100)	0.5 (125)	0.6 (150)	0.7 (175)	0.8 (200)
Speed 12 (CFM)	1505	1467	1420	1375	1340	1303	1258	-	-
Speed 13 (CFM)	1510	1463	1424	1380	1340	1297	1258	1216	-

**NOTE:**

- ① '/' denotes that the static pressure is out of range, air volume drop may affect the performance and reliability. Prohibition of use.
- ② '-' denotes that the air volume is out of range, may lead to over-load and unstable operation of the fan motor. Prohibition of use.

### 3.2.6.3 Capacity Settings

Capacity	Dip Switch Capacity Settings	
	SA2-1	SA2-2
2 TON	ON	OFF
3 TON	OFF	ON
4 TON	ON	OFF
5 TON	OFF	ON

### 3.3 Ductwork

This unit is designed for a complete supply and return ductwork system.

#### **WARNING**

Field ductwork must meet the National Fire Protection Association NFPA 90A, NFPA 90B and any applicable local ordinance.

Sheet metal ductwork run in unconditioned spaces must be insulated and covered with a vapor barrier. Fibrous ductwork may be used if constructed and installed in accordance with SMACNA Construction Standard on Fibrous Glass Ducts. Ductwork must comply with National Fire Protection Association as tested by U/L Standard 181 for Class I Air Ducts. Check local codes for requirements on ductwork and insulation.

Duct system must be designed within the range of external static pressure the unit is designed to operate against. It is important that the system airflow be adequate. Make sure supply and return ductwork, grills, special filters, accessories, etc. are accounted for in total resistance. See fan performance data in this manual.

Do not operate the unit without all ductwork completed.

Do not operate this product without all ductwork attached.

Inadequate ductwork that restricts airflow can result in improper performance and compressor or heater failure. Ductwork is to be constructed in a manner that limits restrictions and maintains suitable air velocity. Ductwork is to be sealed to the unit in a manner that will prevent leakage.

Return ductwork: Do not terminate the return ductwork in an area that can

introduce toxic or objectionable fumes/odors into the ductwork. The return ductwork is to be introduced into the air handler bottom (up flow configuration).

Return Air Filters: Each installation must include a return air filter. This filtering may be performed at the air handler or externally such as a return air filter grille.

### 3.4 Electric Heater

The unit listed in this manual do not have factory installed electric heat. Electric heat is available as an accessory. Please refer to installation instructions provided with heater kit for the correct installation procedure.

**⚠ WARNING** Refer to the “Electric heater kits installation” section of this manual and the instructions provided with the heater kit for the correct installation procedure.

**⚠ WARNING** The electrical characteristics of the unit, the electric heater kit, and the supply power should be identical. This unit does not have factory installed electric heater. Electric heater is available as an accessory. If installing this option, the only heater kits that can be used are the series as indicated below. It is forbidden to use the electric heater other than those recommended.

**⚠ WARNING** Installation and debugging when attention to verify the switch sequence of electrical heating and fan, ensure the fan must be turned on when electric heating operation and ensure the electric heating is turned off before the fan to avoid unsafe.

**⚠ WARNING** Refer to the “Fan Performance Data” section of this manual, otherwise it is possible to cause an exception and dry risk of electric heating.

**⚠ WARNING** The supply ducts that are 5 feet away from electric heating must be at least 1 feet away from other combustibles or walls.


Watsco Part Number	Heater kit model	Code	Description	Ref. unit use(ton)
XPACHTR05KW	LYQ-08-A	320004060202	Circuit breaker, 5kW heat strip	2.0/3.0/4.0/5.0
XPACHTR10KW	LYQ-08-C	320004060200	Circuit breaker, 10kW heat strip	2.0/3.0/4.0/5.0
XPACHTR15KW	LYQ-08-D	320004060201	Circuit breaker, 15kW heat strip	4.0/5.0

Watsco Part Number	Heater kit model	Code	Description	Ref. unit use(ton)
XPACHTR20KW	LYQ-08-E	320004060204	Circuit breaker, 20kW heat strip	4.0/5.0


### 3.4.2 Electric Heater Kits Installation

#### **⚠ CAUTION**

- (1) Ensure that all power supply is disconnected prior to installing the heater kit.
  - (2) A means of strain relief and conductor protection must be provided at the supply wire entrance into cabinet.
  - (3) Use copper conductors only.
  - (4) Installation must follow national electric code and other applicable codes.
  - (5) If this appliance is installed in an enclosed area such as a garage or utility room with any carbon monoxide producing appliance, ensure the area is properly ventilated.
- 1) Refer to the Table for appropriate heater kit.
  - 2) Check any physical damage, do not install damaged heater kit.
  - 3) Remove the access panel from unit.
  - 4) Remove cover plate from unit.
  - 5) Slide the heater kit in to the slot and secure element plate with previously removed screws.
  - 6) Insert power leads into the circuit breaker lugs.
  - 7) Connect ground wire to ground lug.
  - 8) Knock off the hole in the stand colume. If electric heater is not installed, do not knock off the holes; otherwise, may affect the performance and reliability.
  - 9) Replace access panel and check operation.

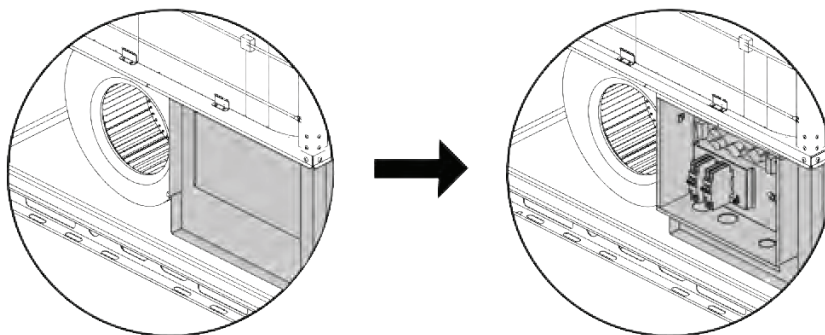

10) Connection of power cords and reserve lines.

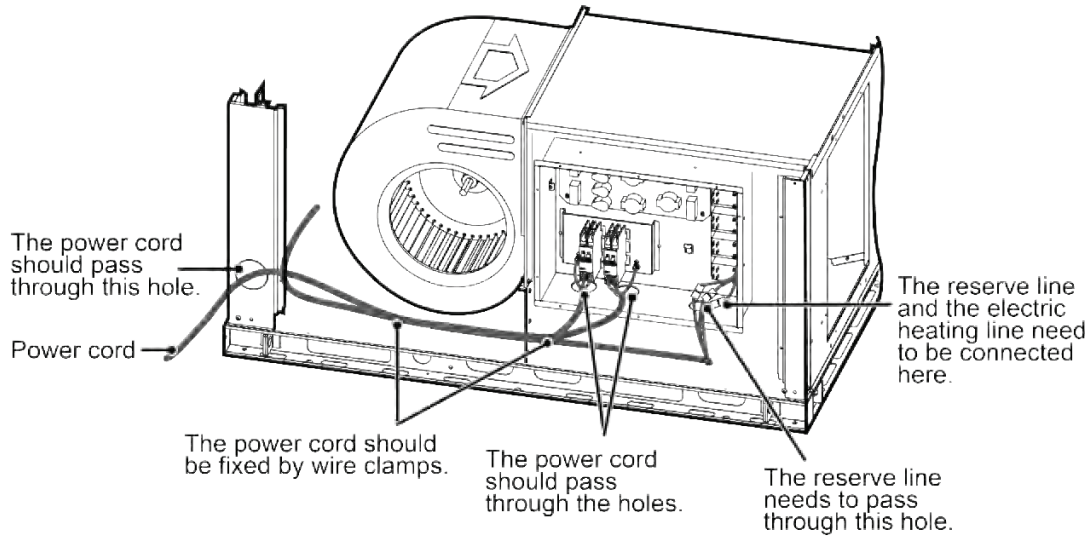

### 3.5 Electrical Installation

#### 3.5.1 Electrical Parameters

Model	Power supply	Fuse capacity (A)	Maximum over-current protection(A)	Minimum circuit ampacity(A)
GK-H05TC/NaA-T(U) GK-H04TC/NaA-T(U)	208/230V-1Ph -60Hz	45	45	39.1
GK-H03TC/NaA-T(U) GK-H02TC/NaA-T(U)	208/230V-1Ph -60Hz	40	40	35

## **⚠ WARNING**

The electrical installation for the air conditioner should observe the following requirements:

- ① The electrical installation must be conducted by professionals in compliance with local laws and regulations and the instructions in this manual. The electric circuit must be equipped with a circuit breaker and air switch both with sufficient capacity.
- ② The unit's operating power must be within the nominal range stated in the instruction manual. Use a specialized power circuit for the air conditioner. Do not draw power from another power circuit.
- ③ The air conditioner circuit should be at least 1.5m away from any inflammable surface.
- ④ The external power cords, the wired controller wires (or the thermostat wires) and unit must be effectively fixed.
- ⑤ The external power cords, the wired controller wires (or the thermostat wires)

and unit can't directly contact any hot objects. For example: they must not contact chimney pipes, warm gas pipes or other hot objects.

- ⑥ The external power cords, the wired controller wires (or the thermostat wires) and unit must not be squeezed. Never pull, stretch or bend the wires.
- ⑦ The external power cords, the wired controller wires (or the thermostat wires) and unit must not collide with any metal beam or edge on the ceiling, or touch any metal burrs or sharp metal edge around.
- ⑧ Connect wires correspondingly by referring to the circuit diagram labeled on the unit or electric box. Screws must be tightened up. Slipped screws must be replaced by specialized flat-head screws.
- ⑨ Wiring terminals should be connected firmly to the terminal board. Loose connection is forbidden.
- ⑩ The wire gauge of power cords should be large enough. Damaged power cords or other wires must be replaced by specialized wires. Wiring work must be done according to national wiring rules and regulations.
- ⑪ The unit has a heating four-way valve.

### 3.5.2 Connect Wiring to the Terminals

(1) For solid wires (as shown below):

- 1) Use wire cutters to cut off the wire end and then peel away about 25mm of the insulation layer.
- 2) Use a screwdriver to unscrew the terminal screw on the terminal board.
- 3) Use nippers to bend the solid wire into a ring that fits the terminal screw.
- 4) Form a proper ring and then put it on the terminal board. Use a screwdriver to tighten up the terminal screw.

(2) For strand wires (as shown below):

- 1) Use wire cutters to cut off the wire end and then peel away about 10mm of the insulation layer.
- 2) Use a screwdriver to unscrew the terminal screw on the terminal board.
- 3) Use a round terminal fastener or clamp to fix the round terminal firmly on the peeled wire end.
- 4) Locate the round terminal conduit. Use a screwdriver to replace it and tighten up the terminal screw (as shown below).

Unit:inch(mm)

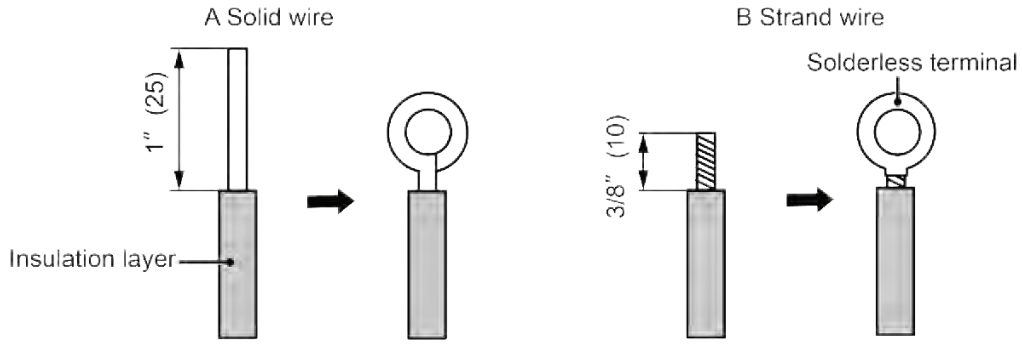


Fig.12

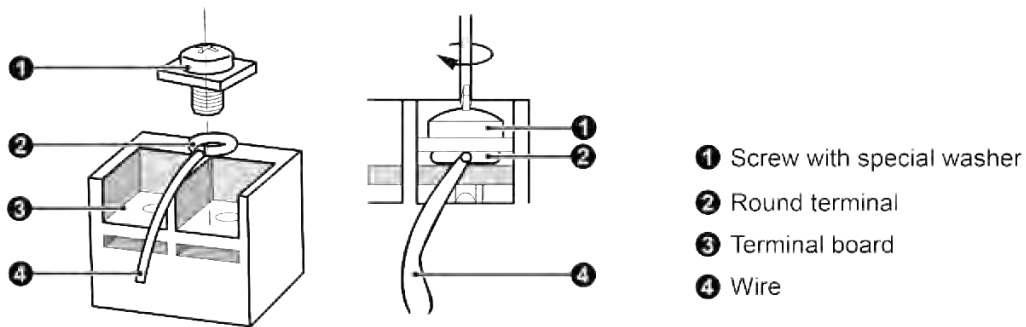


Fig.13

(3) How to connect the wired controller wires (or the thermostat wires) and power cords.

Lead the wired controller wires (or the thermostat wires) and power cords through the insulation tube (as shown in the following figure)


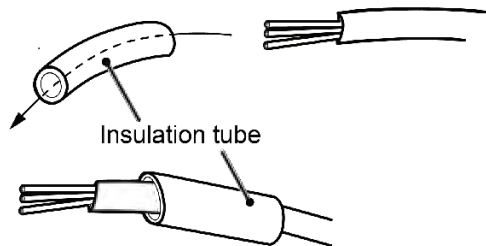


Fig.14

<b>⚠ WARNING</b>	
①	Before working, please check whether the units are powered on.
②	Wrong wire connection may burn the electrical components.
③	Connect the wires firmly to the wiring box. Incomplete installation may lead to fire hazard.
④	Ground wire should be connected.

### 3.6 Wiring Diagram


Without electric heater

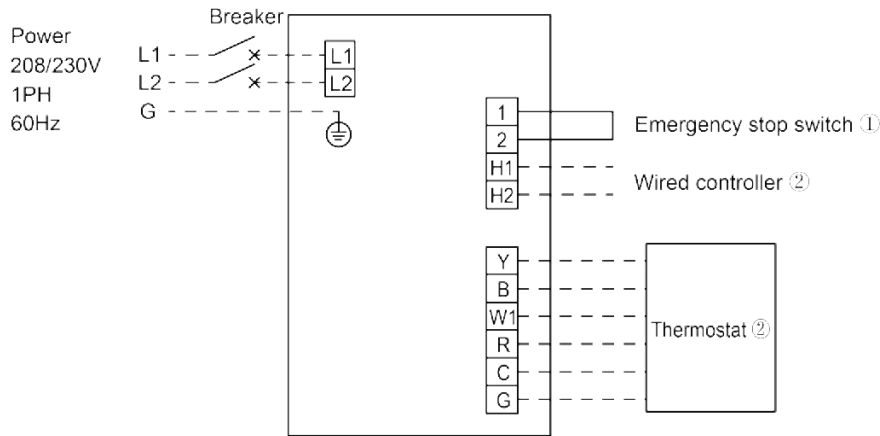

Note: ①The factory has been short-circuited, when the user needs to connect the emergency stop switch, please remove the corresponding short-circuit wire  
 ②The unit can only be connected to a thermostat or wire controller


Fig.15

With electric heater

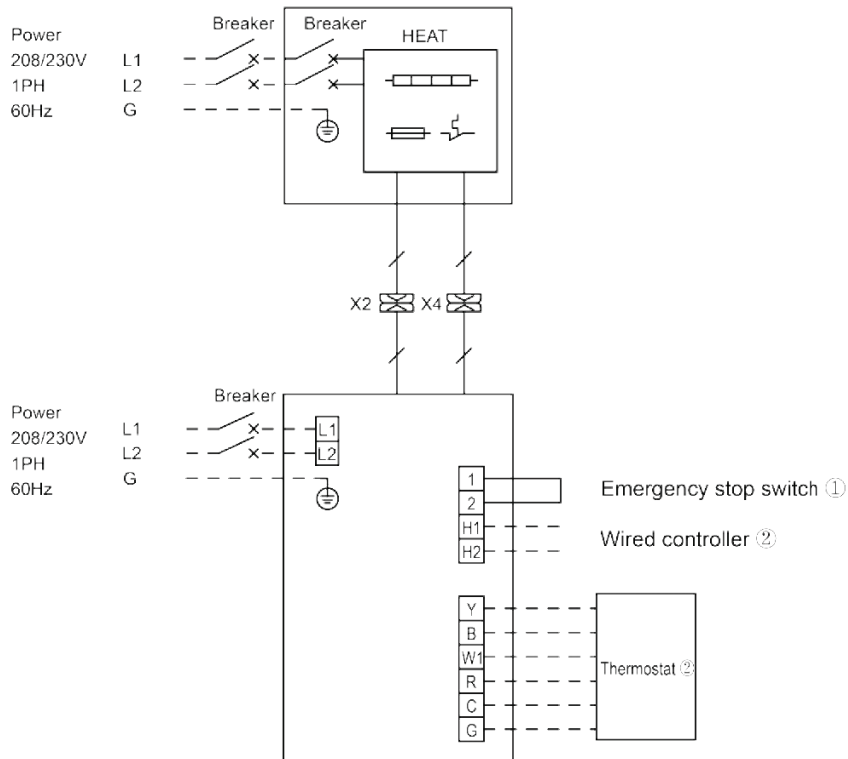

Note: ①The factory has been short-circuited, when the user needs to connect the emergency stop switch, please remove the corresponding short-circuit wire  
 ②The unit can only be connected to a thermostat or wire controller

Fig.16 (with LYQ-08-A,LYQ-08-C)

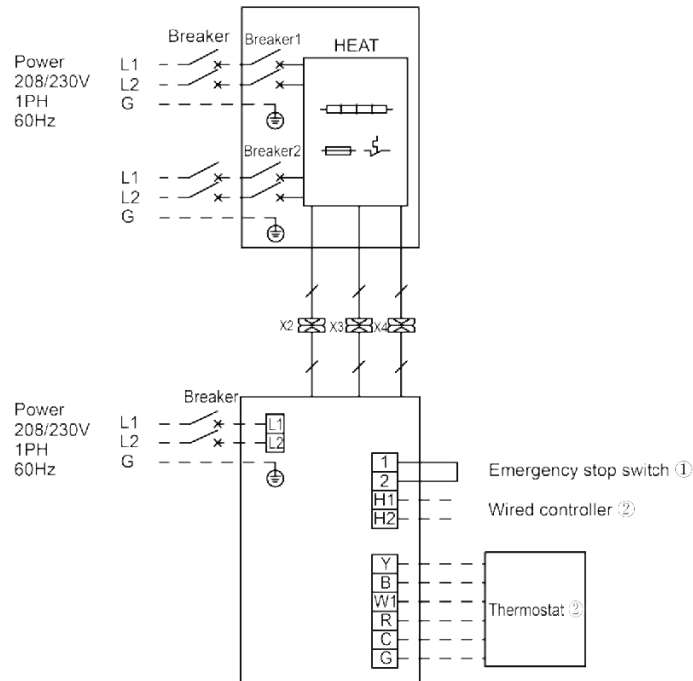

- Note: ①The factory has been short-circuited, when the user needs to connect the emergency stop switch, please remove the corresponding short-circuit wire  
 ②The unit can only be connected to a thermostat or wire controller

Fig.17 (with LYQ-08-D,LYQ-08-E)

**NOTE:**

- ① The factory has been short-circuited, when the user needs to connect the emergency stop switch, please remove the corresponding short-circuit wire.
- ② The unit can only be connected to a thermostat or wired controller.

**NOTE:**

Y means Compressor control signal.

B which is energized under the heating mode means 4-way valve control signal.


W1 means heater control signal.

R means 24V AC power supply.

C means 24V common.

G means indoor side fan signal.

### 3.7 Engineering Wiring Diagram

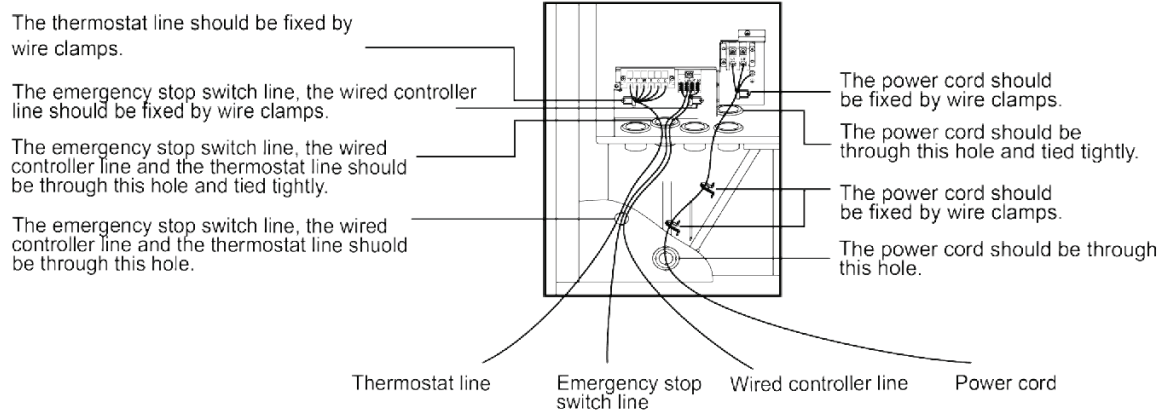

Note: ① If there is no emergency stop switch, please ignore its wiring.  
 ② The unit can only be connected to a thermostat or a wired controller.

Fig.18

GK-H05TC/NaA-T(U), GK-H04TC/NaA-T(U),  
 GK-H03TC/NaA-T(U), GK-H02TC/NaA-T(U)

### 3.8 Check after Installation

Check items	Possible events due to improper installation
Is the main body installed securely?	The unit may fall down, vibrate or produce noise.
Did you do water leakage test?	Cooling capacity may become unsatisfactory.
Is the unit well insulated from heat?	Condensate, water drops may occur.
Does water drainage go well?	Condensate, water drops may occur.
Is the voltage consistent with that stated on the nameplate?	The unit may fail or its components may get burned.
Are the wires and pipes installed correctly?	The unit may fail or its components may get burned.
Has the unit been safely grounded?	Risk of electric leakage.
Do the specifications of wires comply with the requirement?	The unit may fail or its components may get burned.
Is there any obstacle blocking the air inlet and outlet of the units?	Cooling capacity may become unsatisfactory.

### 3.9 Test Running

#### Preparation before connecting the power:

- (1) Power must not be connected if the installation work is not completed.
- (2) Control circuit is correct and all the wires are firmly connected.
- (3) The inside of the unit should be clean. Take irrelevant objects out if there is any.

**Operation after connecting the power:**

- (1) If all the above works are finished, power on the unit.
- (2) If the outside temperature is more than 30°C, heating mode can't be enabled.
- (3) Before test operation, make sure unit is power on and compressor has been preheated for more than 8 hours. Touch the unit to check whether it's normally preheated. Start test operation after unit is normally preheated, otherwise compressor might be damaged. Debugging must be performed by professional technicians or under the guide of professional technicians.
- (4) Make sure the units can run normally.
- (5) If there's sound of liquid shock when the compressor is running, then stop the air conditioner immediately. Wait until the electric heating belt is heated enough, and then restart the air conditioner.

<b><i>NOTICE</i></b>	
①	If you use thermostat to turn off the unit and then immediately turn the unit on again, compressor will need 3min to restart. Even if you press "ON/OFF" button on the thermostat, it won't be started up right away.
②	If there's no display on the thermostat, it's probably because the connection wires between the units and the thermostat are not connected. Please check again.

## 4 Troubleshooting

If your air-conditioning unit suffers from abnormal operation or failure, please first check the following points before repair.

Failure	Possible cause	Solution
The unit can not be started.	The power supply does not connect or improper phase sequence.	Connect the power supply or change two random phase.
	Electrical leakage of air-conditioning unit causes tripping of leakage switch.	Contact the nearest service center.
	The voltage is too low.	Contact the dealer.
	The control loop has failure.	Contact the nearest service center.
The unit operates for a while and then stops.	Air outlet port or intake port of the unit is blocked.	Remove the obstacles.
	There is obstacle in front of the condenser.	Remove the obstacles.
	The control loop is abnormal.	Contact the nearest service center.

Failure	Possible cause	Solution
Poor cooling effect.	Air filter is dirty.	Clean air filter.
	Air outlet port or intake port of indoor side or outdoor side is blocked.	Move the obstacles.
	Too many persons or a heat source in the Room.	If possible, clear heat sources.
	Doors or windows are open.	Close windows and doors.
	Refrigerant leakage.	Contact the nearest service center.
	Some model unit has a High Pressure Switch which is welded on discharge pipe. When the switch goes into effect, the power supply of compressor will be shut off.	Find and manual reset the High Pressure. Switch which is welded on discharge pipe.

**NOTE:** After carrying out the check of the above items and taking relevant measures to solve the problems found but the air-conditioning unit still does not function well, please stop the operation of the unit immediately and contact the nearest service center. Only ask professional serviceman to check and repair the unit.

## 5 Code List

No.	Code	Error or status
1	08	Defrosting
2	09	Oil return
3	A0	Fan Drive module resetting
4	A1	Fan IPM module protection
5	A5	Inlet pipe temperature sensor of condenser error
6	A6	Malfunction from Fan driving part to main-control communication
7	A8	Overheat protection of Fan radiator
8	A9	Fan radiator sensor malfunction
9	AA	Fan AC current protection (input side)
10	Ac	Fan startup failure
11	Ad	Fan Missing phase
12	AE	Fan Current sensor malfunction
13	AF	Fan PFC abnormality
14	AH	Fan DC busbar over voltage protection
15	AJ	The Fan motor in loss of synchronization
16	AL	Fan DC busbar under voltage protection
17	An	Fan Drive Storage chip malfunction
18	AP	Fan AC input voltage abnormality
19	Ar	Fan driver board environment temperature sensor malfunction
20	AU	Fan Charge circuit malfunction

## DC Inverter Rooftop Packaged Air Conditioner

---

No.	Code	Error or status
21	b2	Subcooler gas inlet temperature sensor error
22	b3	Subcooler gas outlet temperature sensor error
23	b4	Subcooler liquid outlet temperature sensor error
24	C4	Jumper failure(ODU)
25	C5	Jumper failure(IDU)
26	CA	Inlet pipe temperature sensor of evaporator error
27	Cb	Outlet pipe temperature sensor of evaporator error
28	CJ	Dip switch settings error
29	d1	DRED1 mode
30	d2	DRED2 mode
31	d3	DRED3 mode
32	dJ	Phase sequence protection
33	E1	Compressor high pressure protection
34	e1	High pressure sensor error
35	E2	Indoor anti-freeze protection
36	E3	Compressor low pressure protection
37	e3	Low pressure sensor error
38	E4	Compressor high discharge temperature protection
39	E6	Communication error
40	E8	Indoor fan motor error
41	EE	Outdoor memory chip error
42	ee	Drive memory chip error
43	EH	Electric heater operation error
44	EL	Emergency Stop(Fire alarm)
45	F0	Indoor ambient temperature sensor error
46	F1	Air outlet temperature sensor or mid temperature sensor of evaporator error
47	F2	Outlet pipe temperature sensor of condenser error
48	F3	Outdoor ambient temperature sensor error
49	F4	Discharge temperature sensor error
50	F5	Temperature sensor error of wired controller
51	F6	Mid temperature sensor of condenser error
52	H3	Compressor overload protection
53	H4	Overloading
54	H5	IPM protection
55	H6	DC fan motor error
56	H7	Drive desynchronizing protection
57	HC	PFC protection
58	Lc	Activation failure
59	Ld	Compressor phase sequence protection
60	LE	Compressor stalling protection
61	LF	Power protection
62	LP	Controllers incompatibility error

No.	Code	Error or status
63	P0	Drive reset protection
64	P5	Over-current protection
65	P6	Communication error between main control and drive
66	P7	Drive module sensor error
67	P8	Drive module over temperature protection
68	P9	Zero passage protection
69	PA	AC current protection
70	Pc	Drive current error
71	Pd	Sensor connecting protection
72	PE	Temperature drift protection
73	PF	Electric box sensor error
74	PH	Bus high voltage protection
75	PL	Bus low voltage protection
76	PP	Input voltage abnormality
77	PU	Charge loop error
78	U9	Fan AC contractor protection or input zero crossing error
79	Ud	Intelligent converter settings error
80	UL	Fan current protection
81	UP	Fan power protection

**NOTE:** If several errors happen at the same time, error codes will show on the display repeatedly.

## 6 Maintenance

To protract the life of the air-conditioning unit, check and maintain the unit regularly with a qualified service person.

### 6.1 Cleaning the Air Filter

- (1) Do not disassemble the air filter when cleaning it. Otherwise failure may be caused.
- (2) If the unit used in an dusty environment, It should clean the air filter more frequently.

### 6.2 Drainage Pipe

Periodically check if the drainage pipe is blocked to smooth the condensate water.

### 6.3 Cleaning the Heat Exchanger

Heat exchanger shall be cleaned regularly, which is at least once every two

months. You can use a dust catcher with nylon brush to clean away the dust on the heat exchanger. If compressed air source is available, it also can be used to clean the heat exchanger. Do not clean it with water.

## 6.4 Notice before Seasonal Use

- (1) Check whether air inlets and air outlets of units are blocked.
- (2) Check whether ground connection is reliable or not.
- (3) Check whether air filter is properly installed.
- (4) If unit starts up after not operating for a long time, it should be power on 8 hours before operation starts so as to preheat the outdoor compressor.
- (5) Check whether unit is securely installed. If there is any problem, please contact GREE authorized service center.

## 6.5 Maintenance after Seasonal Use

- (1) Disconnect power of the entire system.
- (2) Clean the air filter and outer case of units.
- (3) Clean away the dust and obstacles.
- (4) If unit has rust, please apply some paint to it so as to prevent the rust from growing.

## 6.6 Parts Replacement

Parts and components can be obtained from nearby GREE office or GREE distributor.

## 7 After-sales Service


If there's quality defect or other problems in the product, please contact GREE local after-sales service department for help.

Warranty must be based on the following conditions:

- (1) Product's initial startup must be performed by professional technicians from GREE service center or persons assigned by GREE.
- (2) Only GREE spare parts are used.
- (3) All instructions of unit operation and maintenance in this manual must be strictly followed according to set period and set frequency.
- (4) Any breach of the above conditions will disable the warranty.

# Wired Controller X117

## Owners Manual

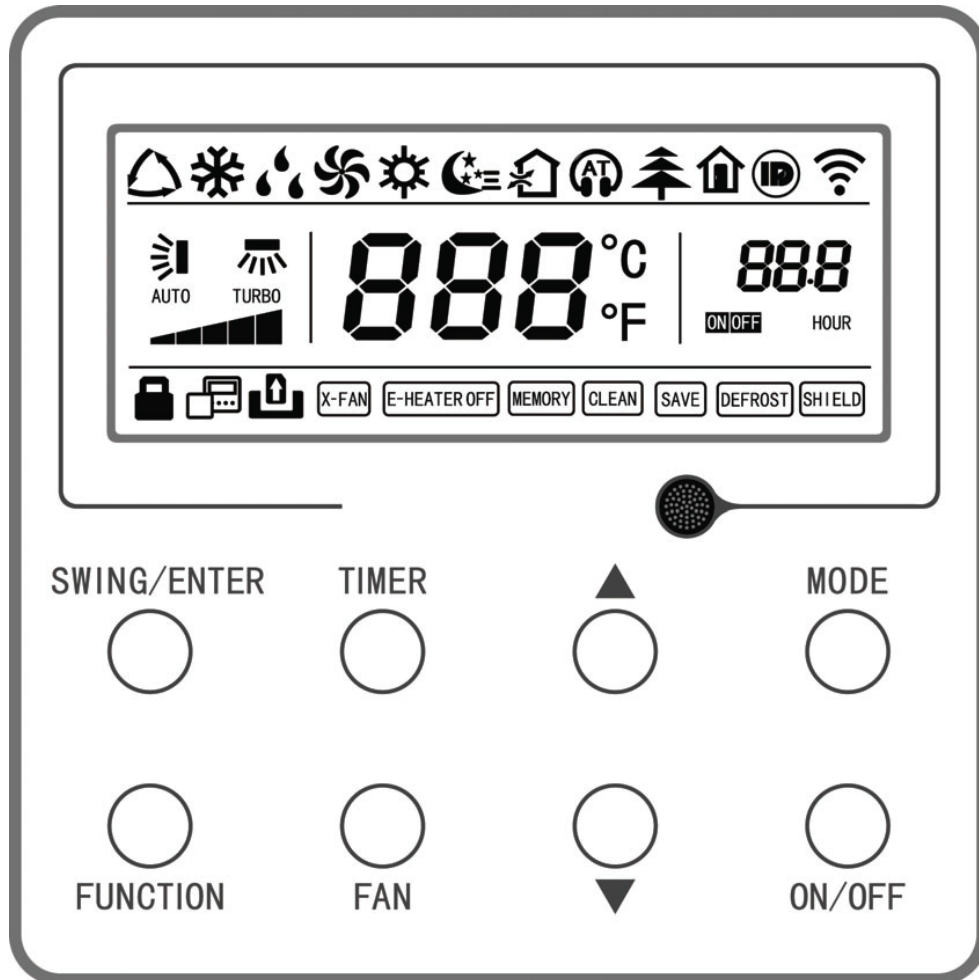

## To Users

Thank you for selecting Gree product. Please read this instruction manual carefully before installing and using the product, so as to master and correctly use the product. In order to guide you to correctly install and use our product and achieve expected operating effect, we hereby instruct as below:

- (1) This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- (2) This instruction manual is a universal manual, some functions are only applicable to particular product. All the illustrations and information in the instruction manual are only for reference, and control interface should be subject to actual operation.
- (3) In order to make the product better, we will continuously conduct improvement and innovation. If there is adjustment in the product, please subject to actual product.
- (4) If the product needs to be installed, moved or maintained, please contact our designated dealer or local service center for professional support. Users should not disassemble or maintain the unit by themselves, otherwise it may cause relative damage, and our company will bear no responsibilities.

# Contents

<b>1 Safety Notices (Please be sure to abide)</b> .....	<b>1</b>
<b>2 Installation</b> .....	<b>2</b>
2.1 Dimension and Components of Wired Controller .....	2
2.2 Installing Position and Requirements of Wired Controller .....	3
2.3 Installation of Wired Controller .....	4
2.4 Disassembly of Wired Controller .....	6
<b>3 Introduction to Display</b> .....	<b>6</b>
3.1 Outline of Wired Controller .....	6
3.2 Liquid Crystal Display of Wired Controller .....	7
3.3 Instruction for Liquid Crystal Display of Wired Controller .....	7
<b>4 Instruction for Operation</b> .....	<b>9</b>
4.1 Silkscreen of Buttons .....	9
4.2 ON/OFF Setting .....	9
4.3 Mode Setting .....	11
4.4 Setting of Temperature .....	12
4.5 Setting of Fan Speed .....	13
4.6 Setting Swing Function .....	14
4.7 Setting of Timer Function .....	15
4.8 Setting of Functional Buttons .....	16
4.9 Setting of Other Functions .....	21
<b>5 Display of Errors</b> .....	<b>25</b>

## 1 Safety Notices (Please be sure to abide)



**WARNING:** If not abide them strictly, it may cause severe damage to the unit or the people.



**NOTE:** If not abide them strictly, it may cause slight or medium damage to the unit or the people.



This sign indicates that the them's operation must be prohibited. Improper operation may cause severe damage or death to people.



This sign indicates that the items must be observed. Improper operation may cause damage to people or property.



### **WARNING!**

This product can't be installed at corrosive, inflammable or explosive environment or the place with special requirements, such as kitchen. Otherwise, it will affect the normal operation or shorten the service life of the unit, or even cause fire hazard or serious injury. As for above special places, please adopt special air conditioner with anti-corrosive or anti-explosion function.

## 2 Installation

### 2.1 Dimension and Components of Wired Controller

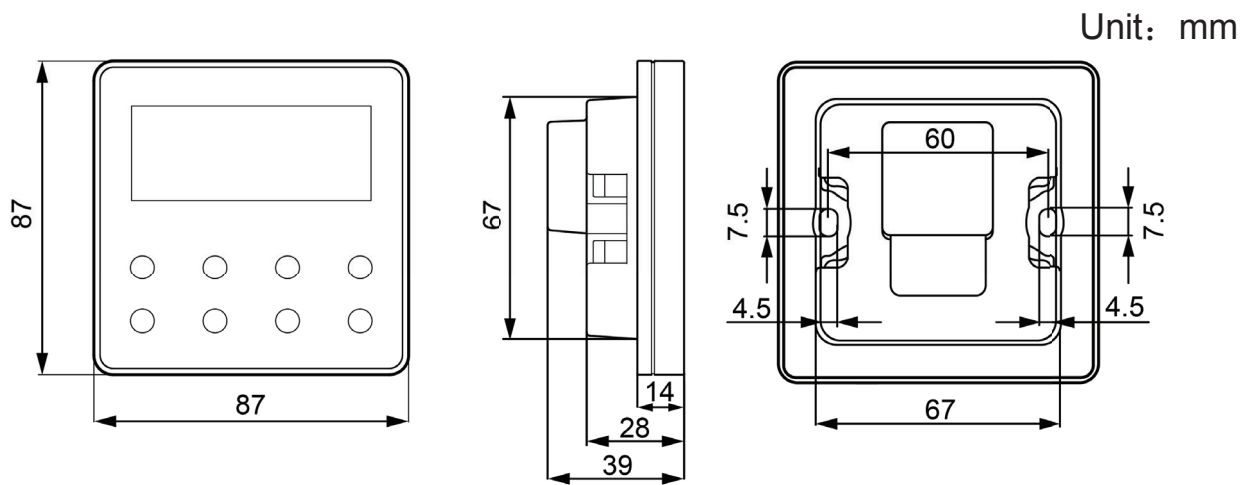


Figure 2-1 Dimension of Wired Controller

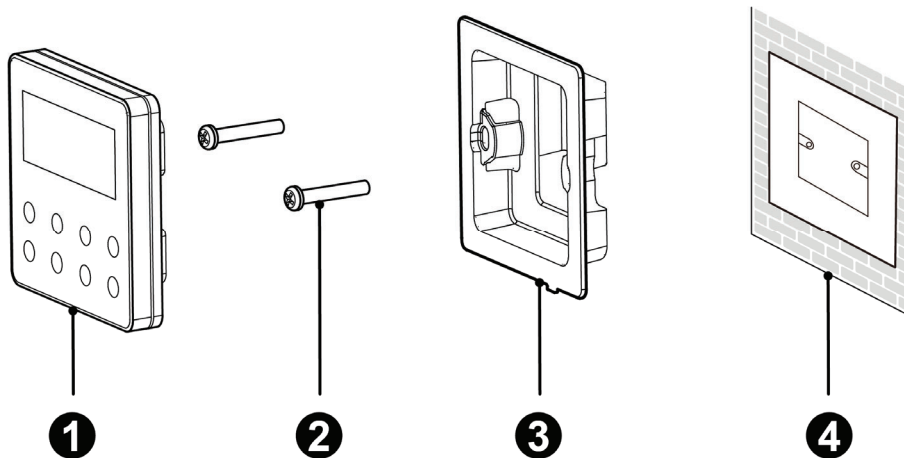


Figure 2-2 Components of Wired Controller

Table 2.1.1 Introduction of Components

No.	①	②	③	④
Name	wired controller	screw M4×25	installing box of wired controller	junction box for installing inside the wall
Quantity	1	2	1	1(prepared by user)

## 2.2 Installing Position and Requirements of Wired Controller

- (1) Please do not install the wired controller in the position where is wet or is likely to be splashed with water;
- (2) Please do not install the wired controller near high-temperature objects or under direct sunlight;
- (3) Please do not install the wired controller in the position where facing the window, so as to avoid interference of neighbor's remote controller with the same model and cause malfunction;
- (4) Before installation, please cut off the power supply of strong current wire inside the wall, it is not allowed to install under electrified status;
- (5) In order to avoid malfunction due to electromagnetic interference and other causes, please pay attention to the following notices:
  - 1) Make sure that the interface of communication wire is correct, otherwise the communication cannot work;
  - 2) Signal wire of wired controller should be separated from the power cord and indoor and outdoor connecting wire, the shortest distance should be over 20cm, otherwise the communication cannot work normally;

- 3) If the unit is installed in the position where is likely to be impacted by electromagnetic interface, signal wire of wired controller should be made of STP (shielded twisted pair).
- (6) The wired controller should only be installed indoors, and its working temperature range is 0°C ~ 50°C.

## 2.3 Installation of Wired Controller

First to select the right signal wire of wired controller: 2-core signal wire (wire diameter $\geq$ 0.75mm, length $<$ 30m, recommendable length is 8m).

For installation steps of wired controller please refer to the following sketch map, brief instructions are as below:

- (1) Before installation, please cut off the power supply of indoor unit, live working during installation is not allowed;
- (2) Pull out the 2-core STP inside the wall from the installing hole, thread the wire through the connecting hole in the back of soleplate of wired controller;
- (3) Stick the soleplate of wired controller on the wall, use screw M4 $\times$ 25 to fix the soleplate onto the installing hole of wall;
- (4) Connect the 2-core STP with the two wiring terminals in the back of wired controller respectively, and screw up the screw; no polarity for these two wiring terminals, but note that it should not be connected to strong current;

- (5) Buckle the panel of wired controller with the soleplate, and then the installation is finished.

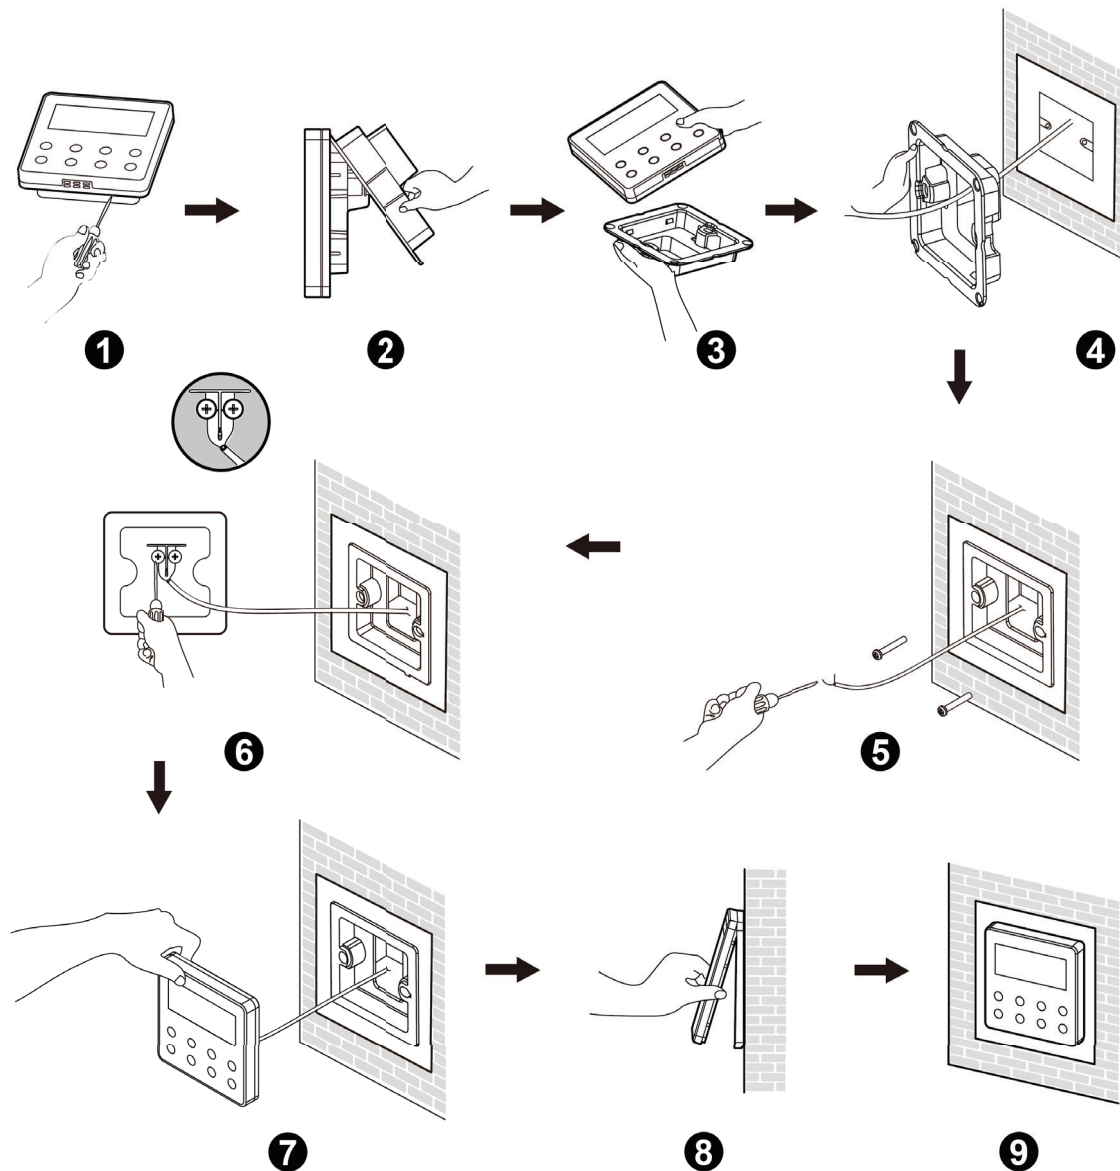


Figure 2-3 Sketch Map for Installation of Wired Controller

## 2.4 Disassembly of Wired Controller

Disassembly for wired controller is as below:

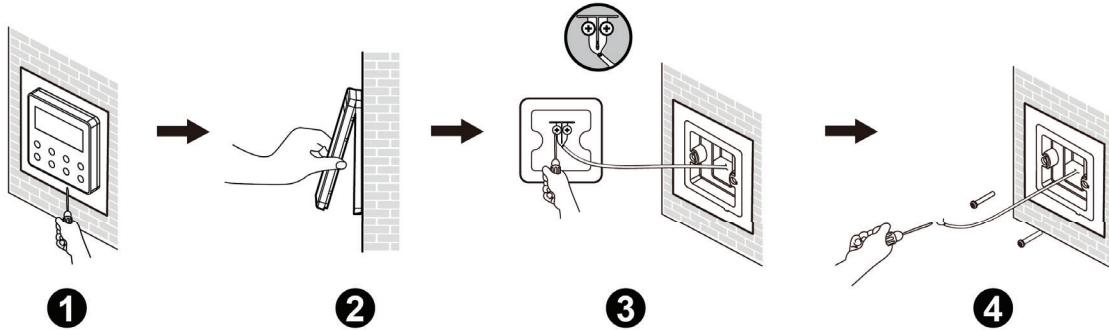


Figure 2-4 Sketch Map for Disassembly of Wired Controller

## 3 Introduction to Display

### 3.1 Outline of Wired Controller

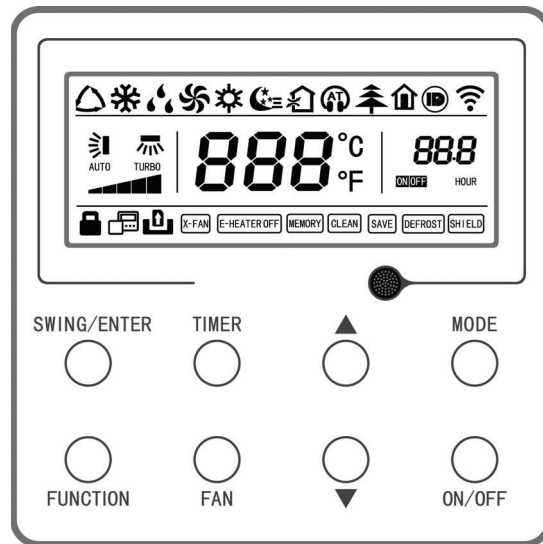


Figure 3-1 Outline of Wired Controller

### 3.2 Liquid Crystal Display of Wired Controller

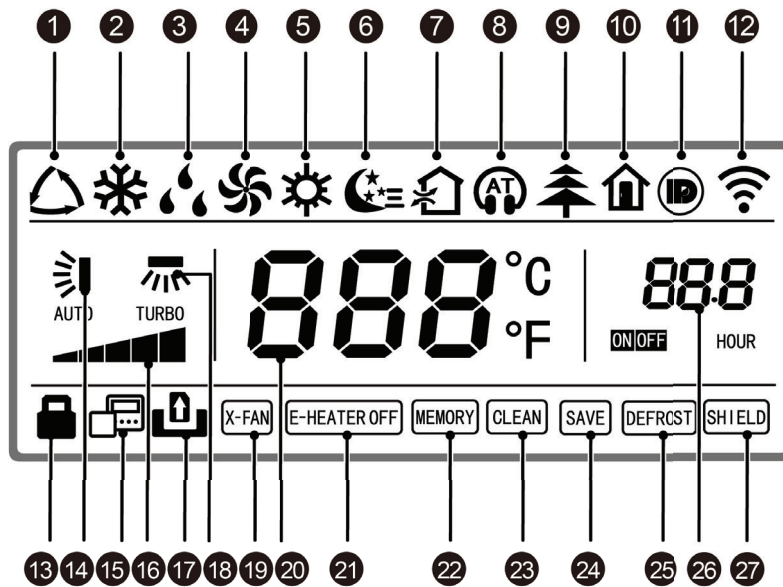


Figure 3-2 Liquid Crystal Display of Wired Controller

### 3.3 Instruction for Liquid Crystal Display of Wired Controller

Table 3.3.1 Instruction for Liquid Crystal Display of Wired Controller

No.	Display	Instruction of Display
1	Auto	Automatic mode (under auto mode, the indoor unit will select its operating mode according to the variation of room temperature)
2	Cool	Cooling mode
3	Dry	Dry mode
4	Fan	Fan mode
5	Heat	Heating mode

## Wired Controller XK117

No.	Display	Instruction of Display
6	Sleep	Display when sleep function is set (only display sleep mode II)
7	Exchange	Display when air exchange function is set
8	Silent	Display when silent function is set (only display silent, no AT)
9	Health	Display when health function is set
10	Absent	Display when absent function is set
11	I-DEMAND	Display when I-DEMAND function is set
12	WiFi	Display when WiFi function is set
13	Child-lock	Child-lock status, display when child-lock function is set
14	Up & down swing	Display when up and down swing function is set
15	Slave wired controller	Icon of slave wired controller, it will display when slave wired controller is set
16	Fan speed	The fan speed set currently (including auto, low, medium and low, medium, medium and high, high, and turbo)
17	No card	No card in gate control system
18	Left & right swing	Display when left and right swing function is set
19	X-fan	Display when dry function is set
20	Temperature	It will display the setting temperature
21	E-heater	On/off switch of auxiliary heating
22	Memory	Memory status (After power failure and re-energizing the unit, it will resume to ON/OFF status of unit before the power failure)
23	Clean	Filter washing reminder
24	Save	Display when energy-saving function is set
25	Defrost	Defrosting status

No.	Display	Instruction of Display
26	Timer	Display when timer status is set
27	Shield	Shielding status

## 4 Instruction for Operation

### 4.1 Silkscreen of Buttons

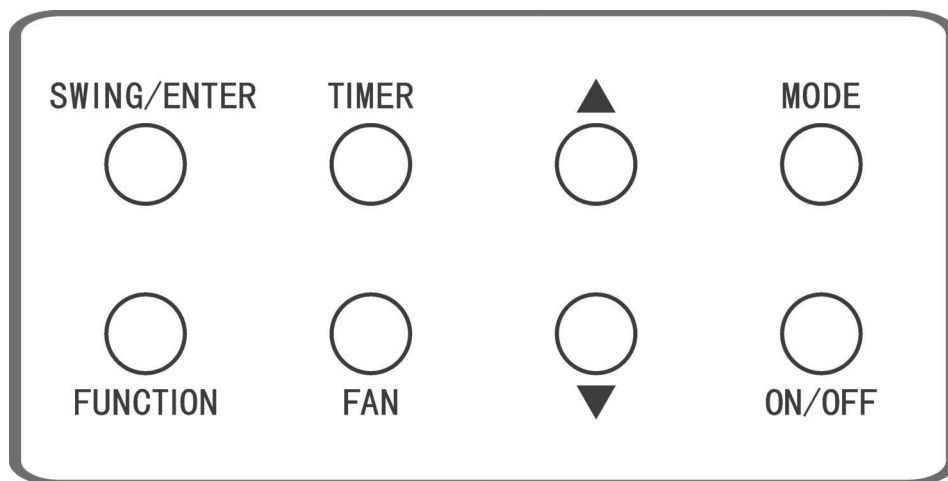


Figure 4-1 Silkscreen of Buttons

### 4.2 ON/OFF Setting

Press “ON/OFF” button to turn on the air conditioner, then the wired controller will display the setting temperature, fan speed, mode, etc. Press “ON/OFF” button again to stop the operation of air conditioner, then the wired controller only displays the setting temperature. ON and OFF status of unit will display as below.

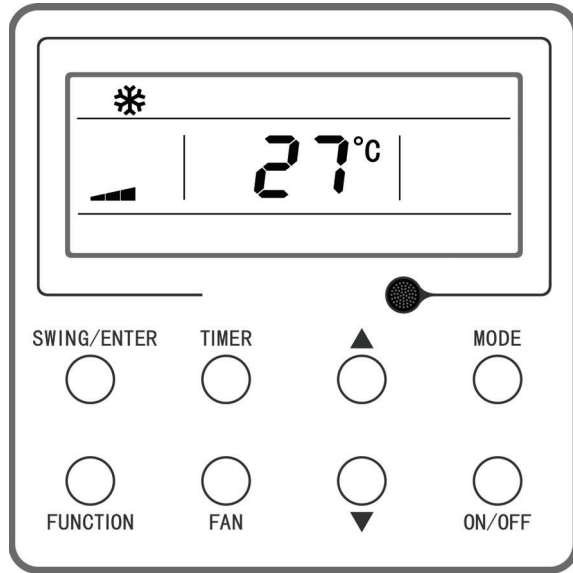


Figure 4-2 ON Status

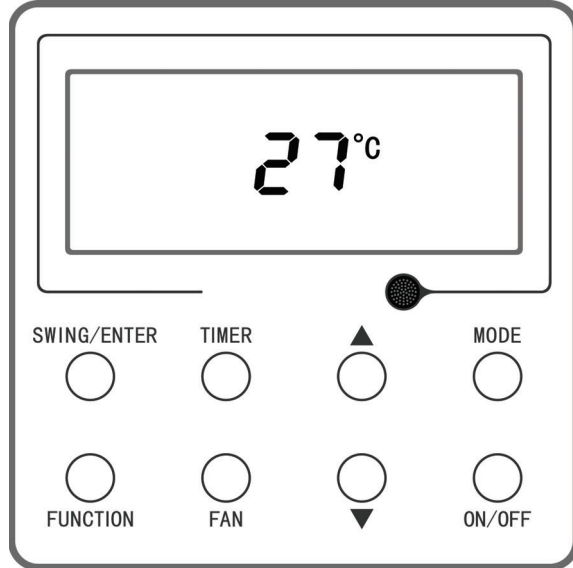


Figure 4-3 OFF Status

### 4.3 Mode Setting

Under on status, each time press the “MODE” button, the mode will switch circularly according to the following order, as shown in the figure.

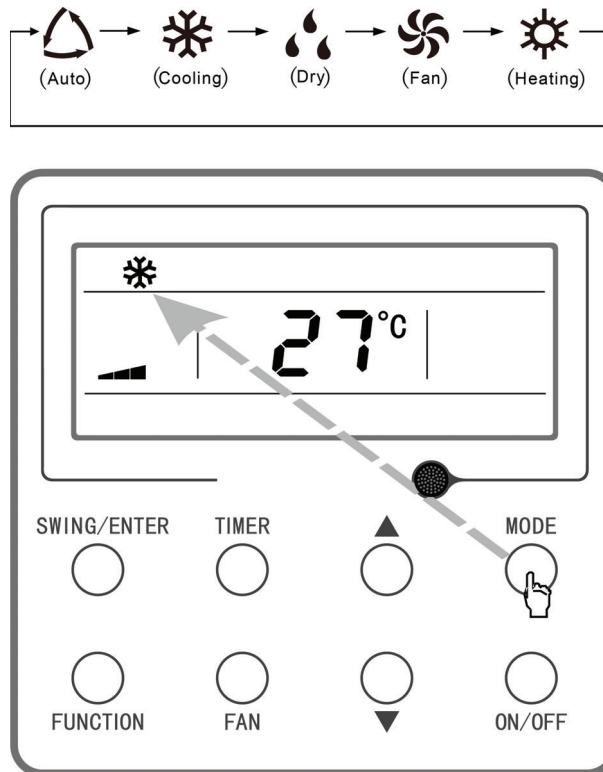






Figure 4-4 Mode Setting

#### NOTE!

Under auto mode, if the unit conducts auto cooling, “” and “” are turned on; if the unit conducts auto heating, “” and “” are turned on.

## 4.4 Setting of Temperature

Under on status, press “▲” or “▼” button, the setting temperature will increase or decrease at the unit of 1°C (°F); when press and hold the button, it will increase or decrease at the unit of 1°C (°F) in every 0.3 second. Operation is as below.

Temperature setting range under cooling, dry, fan and heating mode is 16°C ~30°C (61°F ~86°F). There are two statuses under auto mode. Status 1: the temperature can be adjusted in the range of 16°C ~30°C (61°F ~86°F); status 2: the temperature can't be adjusted. The status is decided by the unit model.

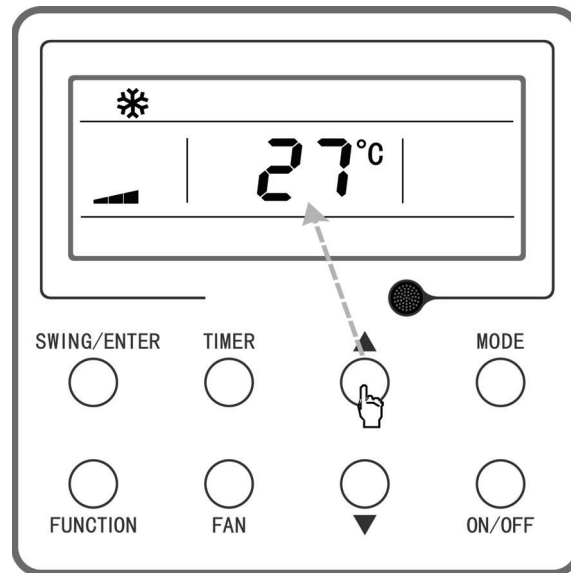


Figure 4-5 Setting of Temperature

## 4.5 Setting of Fan Speed

Under on status, press “FAN” button, the fan speed will switch circularly according to the following order, as shown below.


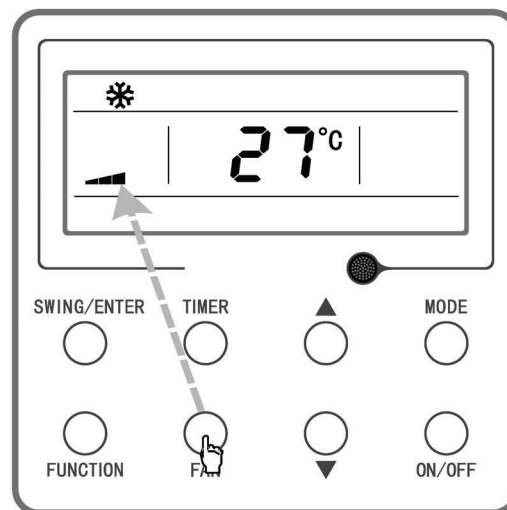


Figure 4-6 Setting of Fan Speed

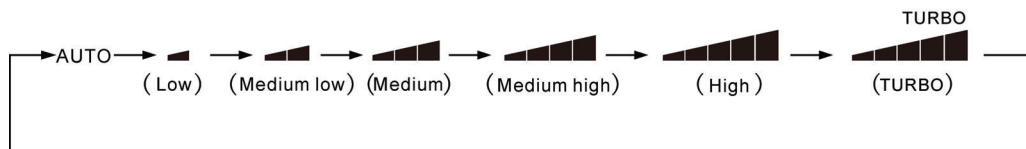

### NOTES!

- (1) Under dry mode, the fan speed will automatically set as low speed, and the fan speed cannot be adjusted.
- (2) Under fan and auto mode, turbo speed cannot be set.

## 4.6 Setting Swing Function

There are two ways for swing mode: simple swing and fixed swing. Under off status, press “SWING/ENTER” button and “▲” button simultaneously for 5 seconds, the up & down swing icon will flash, then switch for simple swing and fixed swing is done.

When it is set to be simple swing, under on status, press “SWING/ENTER” button, the up & down swing is activated, press the button again the up & down swing is turned off.

When it is set to be simple swing, under on status, press “FUNCTION” button to select left & right swing, press “SWING/ENTER” button to turn on or turn off left & right swing.

When it is set to be fixed swing, press “SWING/ENTER” button, the unit will circularly switch the up & down swing mode according to the order shown below:




Figure 4-7 Order for Up & Down Fixed Swing

When it is set to be fixed swing, press “FUNCTION” button to select left & right swing, then press “▲” or “▼” button, the unit will circularly switch the left & right swing mode according to the order shown below. Press “SWING/ENTER” button, the setting is done.




Figure 4-8 Order for Left &amp; Right Fixed Swing

**NOTE!**

Whether the fixed swing mode is successfully set depends on whether the unit model can support such function.

## 4.7 Setting of Timer Function

Under ON/OFF status, press “TIMER” button can set ON/OFF time of unit.

Timer-on setting: under off status and timer function has not been set, press “TIMER” button, the liquid crystal screen will display “xx.x hour”, and “ON” and “hour” icons flash simultaneously, then press “▲” or “▼” button to adjust the on time. Press “TIMER” button, the setting is done. If before pressing “TIMER” button to finish the setting, press “MODE” button can switch to timer setting status, liquid crystal screen will display “xx.x hour”, and “OFF” and “hour” icons flash simultaneously, then press “▲” or “▼” button to adjust the off time, and press “TIMER” button again to finish the setting, the timer area will display “xx.x hour ON/OFF”, “xx.x hour” is the time for turning on the unit in setting time, and timer-off time is not displayed.

Timer-off setting: under on status and timer function has not been set, press “TIMER” button, the liquid crystal screen will display “xx.x hour”, and “OFF” and “hour” icons flash simultaneously, then press “▲” or “▼” button to adjust the off time. Press

“TIMER” button, the setting is done. If before pressing “TIMER” button to finish the setting, press “MODE” button can switch to timer setting status, liquid crystal screen will display “xx.x hour”, and “ON” and “hour” icons flash simultaneously, then press “▲” or “▼” button to adjust the on time, and press “TIMER” button again to finish the setting, the timer area will display “xx.x hour ON/OFF”, “xx.x hour” is the time for turning off the unit in setting time, and timer-on time is not displayed.

Cancel timer: after setting the timer function, press “TIMER” button, the liquid crystal screen will not display “xx.x hour” anymore, the timer function is canceled.

Timer area: 0.5~24 hours. Each time press “▲” or “▼” button, the setting time will increase/decrease 0.5 hour, press and hold the buttons the unit will automatically increase/decrease 0.5 hour in every 0.3 second.



Under on status, the timer-on time is counted from the time when the unit is turned off; under off status, the timer-off time is counted from the time when the unit is turned on.

## 4.8 Setting of Functional Buttons

Under on status, press “FUNCTION” button can select to set sleep (can be set under cooling, dry, heating modes), air exchange, silent (can be set under auto, cooling, heating modes), health, absent (can be set under heating mode), I-Demand (can be set under cooling mode), WiFi, left & right swing, turbo fan (can be set under

cooling and heating modes), X-fan (can be set under cooling and dry mode), auxiliary heating (can be set under heating mode), and washing remind function. The selected functional icon will flash, then press “SWING/ENTER” button can activate or cancel such function(It needs to select the detailed item for WiFi setting, Please refer to the detailed instruction for details as below.). Before setting, if the function has not been activated, press “SWING/ENTER” can turn on such function; if the function is activated before setting, press “SWING/ENTER” button can turn off such function. When the function is activated, the corresponding icon will turn bright. After finishing setting one function, it will jump to the next functional setting.

Specific instructions for setting of the following functions:

- (1) When setting air exchange function, there are a total 10 types of air exchange modes from 1 to 10, the temperature area will display the current mode, first press “▲” or “▼” button to select the mode, then press “SWING/ENTER” button to confirm. For details of air exchange mode are as below:
  - 1——the unit runs for 60 minutes, fresh air valve opens for 6 minutes;
  - 2——the unit runs for 60 minutes, fresh air valve opens for 12 minutes;
  - 3——the unit runs for 60 minutes, fresh air valve opens for 18 minutes;
  - 4——the unit runs for 60 minutes, fresh air valve opens for 24 minutes;
  - 5——the unit runs for 60 minutes, fresh air valve opens for 30 minutes;
  - 6——the unit runs for 60 minutes, fresh air valve opens for 36 minutes;
  - 7——the unit runs for 60 minutes, fresh air valve opens for 42 minutes;

- 8——the unit runs for 60 minutes, fresh air valve opens for 48 minutes;
- 9——the unit runs for 60 minutes, fresh air valve opens for 54 minutes;
- 10——Both the unit and fresh air valve are turned on.



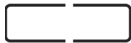

(2) When setting auxiliary heating function, press “▲” or “▼” button can select the three auxiliary heating modes of “E-HEATER”, “” and “E-HEATER OFF”. The detailed description of the three modes can refer to the following table:

Table 4.8.1 Auxiliary Heating Setting Instructions

No.	Display	Instruction of Display
1	E-HEATER	Auxiliary heating mode 1
2		Auxiliary heating mode 2
3	E-HEATER OFF	Prohibited auxiliary heating

After selecting the mode, press “SWING/ENTER” button to confirm the setting. Different icons are displayed according to different states of auxiliary heat, as detailed in the following table:

Table 4.8.2 Description of Auxiliary Heating State

No.	Display	Instruction of Display
1	No display	Auxiliary heating is not running
2	E-HEATER	
3		Auxiliary heating is running
4		
5	E-HEATER OFF	Prohibited auxiliary heating



This function is only available for the unit with auxiliary heating. Auxiliary heating will run according to the environment requirements and the safe reliability. The difference for auxiliary heating mode 1 and auxiliary heating mode 2 is that the auxiliary is not allowed to run when outdoor ambient temperature of auxiliary heating mode 2 is higher than 0°C. Other conditions for running the auxiliary heating mode are the same.

- (3) When setting washing remind function, the timer area will display 2-bit number that means the pollution level, then press “▲” and “▼” buttons to select, and press “SWING/ENTER” button to confirm the setting. Conversion relation between the displayed pollution level and accumulative operating time are as the following list. After setting, when it reaches the washing time, “CLEAN” icon will flash and remind, if you press “▲” and “▼” buttons to adjust the level, and press “SWING/ENTER” button, then the accumulative time for filter washing remind will not be reset; if the time after adjustment is larger than the current accumulative time, then “CLEAN” icon will stop flashing; if the time after adjustment is less than the current accumulative time, then “CLEAN” icon will continue to flash. The only method for cancelling the remind function is to press “FUNCTION” button to switch to “CLEAN”

icon, and set the timer area to be “00”, and then press “SWING/ENTER” button, then the accumulative time of filter washing remind is reset.

Table 4.8.3 Pollution Level Parameter List

Pollution Level	Accumulative operating time (hour)	Pollution Level	Accumulative operating time (hour)	Pollution Level	Accumulative operating time (hour)
10	5500	20	1400	30	100
11	6000	21	1800	31	200
12	6500	22	2200	32	300
13	7000	23	2600	33	400
14	7500	24	3000	34	500
15	8000	25	3400	35	600
16	8500	26	3800	36	700
17	9000	27	4200	37	800
18	9500	28	4600	38	900
19	10000	29	5000	39	1000

- (4) When absent function is set, the setting temperature will display 8°C (46°F), the setting fan notch displays auto and cannot be adjusted.
- (5) When I-Demand function is set, the setting fan notch displays auto and cannot be adjusted.
- (6) When setting WiFi function, the temperature area will display the WiFi status. Press “▲” or “▼” button to turn on WiFi (“on” is displayed), turn off WiFi (“off” is displayed) or reset WiFi (“rES” is displayed), and then press “SWING/ENTER” button to confirm it. Once WiFi is turned on, the icon of

WiFi is displayed; once WiFi is turned off, the icon of WiFi won't be displayed. If reset WiFi, WiFi is defaulted to be turned on.

**NOTE!**

The unit should support WiFi Function and the G-Cloud accessories should be purchase separately for installation.

## 4.9 Setting of Other Functions

### 4.9.1 Setting of Energy-saving Function

Under off status, press “TIMER” and “▲” buttons simultaneously for 5 seconds to enter into energy-saving setting, then “SAVE” character or icon and cooling mode icon are displayed, the “SAVE” character or icon flashes, the temperature area displays the upper limit and lower limit temperature, press “▲” or “▼” button can set the limit temperature, the setting range is 16°C ~ 30°C (61°F ~ 86°F).

Press “MODE” button can switch cooling or heating mode. For cooling only unit, it can only set the lower limit temperature of cooling under energy-saving mode. During the setting, press “SWING/ENTER” button at any time can save the setting temperature and energy-saving status of different modes, and then start up the energy-saving function.


After the energy-saving function is activated, under off status, press “TIMER” and “▲” buttons simultaneously for 5 seconds again, the function is canceled.

### 4.9.2 Setting of Low-temperature Dry Function

Under dry mode, when the setting temperature is 16°C (61°F), press “▼” button for twice, the setting temperature becomes 12°C (54°F), then the unit enters into low-temperature dry function.

When low-temperature dry function is turned on, directly press “▲” button or switch the mode can quit the function.

### 4.9.3 Setting of Child-lock Function

Without error, under ON or OFF status of unit, press “▲” and “▼” buttons simultaneously for 5 seconds can enter into child-lock function, the liquid crystal screen will display “”; press “▲” and “▼” buttons simultaneously again for 5 seconds can quit the child-lock function.

Under child-lock status, no response for pressing any buttons. The unit will memorize the child-lock status after power failure and re-energizing the unit.

### 4.9.4 Setting of Memory Function

Under off status, press “MODE” and “▲” button simultaneously for 5 seconds can turn on or turn off memory function. When memory function is set, “MEMORY” displays.

If memory function has not been set, when the unit is re-energized after power failure, the unit is off status. If the memory function is set in wired controller, when the wired controller is re-energized after power failure, it will resume to the operating status before power failure.

#### 4.9.5 Switch between Fahrenheit and Degree Celsius

Under off status, press “MODE” and “▼” buttons simultaneously for 5 seconds, display board will switch between degree Celsius and Fahrenheit.

#### 4.9.6 Inquiry of Ambient Temperature

Under off or on status, press and hold “SWING/ENTER” button for 5 seconds to enter into ambient temperature inquiry interface, then timer area displays the ambient temperature type 01 or 02, and ambient temperature area displays the corresponding ambient temperature of corresponding type. In which, 01 refers to outdoor ambient temperature, 02 refers to indoor ambient temperature. Press “MODE” button can switch between type 01 and 02. Press buttons other than “MODE” or when the unit receives remote control signal, it will quit the inquiry status. If there is no any operation for 20 seconds, it will quit automatically.



① When the outdoor ambient temperature sensor detects the same temperature for 12 hours, it will shield the display of outdoor ambient temperature sensor.

② When outdoor unit enters into low power consumption mode, the wired controller can't check valid outdoor ambient temperature.

#### 4.9.7 Auto Clean Function

Under unit off status, hold "TIMER" and "MODE" buttons simultaneously for 5s to

turn on or turn off the internal clean function. When the internal clean function is turned on, temperature display area in liquid crystal panel will displays “CL”.

During the self-cleaning process of evaporator, the unit will perform fast cooling or fast heating. There may be some noise, which is the sound of flowing liquid or thermal expansion or cold shrinkage. The air conditioner may blow cool or warm air, which is a normal phenomenon. During cleaning, please make sure the room is well ventilated to avoid affecting the degree of comfort.



### **NOTES!**

- (1) The self-cleaning function can only work under normal ambient temperature. If the room is dusty, it is recommended to clean once a month; if not, it is recommended to clean once every three months. After the self-cleaning function is turned on, you may leave the room. When self-cleaning is finished, the air conditioner will enter standby mode.
- (2) This function is applicable for some models.

## 5 Display of Errors

When error occurs in the system, temperature display area in liquid crystal panel will display error code, when multiple errors occur simultaneously, it will circularly display error code. If the wired controller has been connected to multiple systems, when error occurs in a certain system, the first bit of number in temperature area will display the system number (it will not display system number when there is only one system).

When error occurs, please turn off the unit and seek for professional personnel to maintain.

The following figure refers to the high-pressure protection under on status.

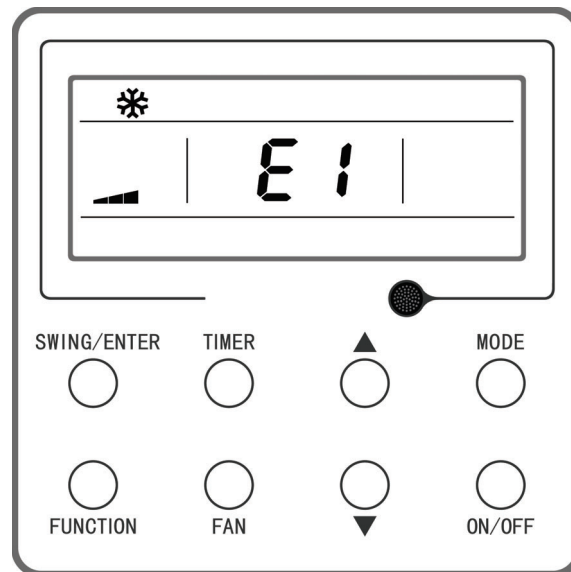


Figure 5-1 High-pressure Protection

Table 5.1 Error Code List

Error Code	Error
E1	Compressor high-pressure protection
E2	Indoor anti-freeze protection
E3	Compressor low-pressure protection, refrigerant lack protection, refrigerant collection mode
E4	Compressor air discharge high-temperature protection
E6	Communication error
E8	Indoor fan error
E9	Water-full protection
F0	Indoor ambient temperature sensor error
F1	Evaporator temperature sensor error
F2	Condenser temperature sensor error/Middle part of condenser temperature sensor error
F3	Outdoor ambient temperature sensor error
F4	Discharge temperature sensor error
F5	Wired controller temperature sensor error
C5	IDU jumper cap error
EE	IDU or ODU memory chip error
PF	Electric box sensor error
H3	Compressor overload protection
H4	Overload
H5	IPM protection
H6	DC fan error

## Wired Controller XK117

Error Code	Error
H7	Driver out-of-step protection
HC	PFC protection
Lc	Startup failure
Ld	Compressor phase-sequence protection
LF	Power protection
LP	IDU and ODU unmatched or Controller unmatched
U7	4-way valve switch-over error
P0	Driver reset protection
P5	Over-current protection
P6	Master control and driver communication error
P7	Driver module sensor error
P8	Driver module high temperature protection
P9	Zero-crossing protection
PA	AC current protection
Pc	Driver current error
Pd	Sensor connection protection
PE	Temperature drift protection
PL	Bus low-voltage protection
PH	Bus high-voltage protection
PU	Charging loop error
PP	Input voltage error
ee	Driver memory chip error

## Wired Controller XK117

---

Error Code	Error
C4	ODU jumper cap error
dJ	Phase-loss and anti-phase protection
oE	ODU error, for specific error please see the status of ODU indicator
EL	Emergency stop
LE	Compressor stall protection
F6	Condenser medium pipe temperature sensor error
EH	Auxiliary heating protection
Un	Communication error between grid-connected drive board and main control board
CJ	DIP switch code error
Ud	Invalid configuration information of inverter
GE	High or low photovoltaic voltage protection
G8	Overcurrent protection at power grid side
G7	Voltage over/under frequency at power grid side
G9	Drive IPM module protection at power grid side
GL	Hardware overcurrent protection at power grid side
GC	Photovoltaic DC hardware overcurrent protection
GJ	Module high-temperature protection at power grid side
GP	Temperature sensor protection at power grid side
G6	Photovoltaic low voltage ride through
Gy	Drive beyond retrieve error at power grid side
G1	Photovoltaic Anti-islanding protection
G0	Photovoltaic reversed connection protection
GU	Charged circuit protection at power grid side

Error Code	Error
GA	Low/high input voltage protection at power grid side
G2	Photovoltaic DC overcurrent protection
Gb	Relay protection at power grid side
G3	Photovoltaic power generation overload
Gd	Current sensor protection at power grid side
GF	DC bus midpoint potential imbalance
Gn	Insulated impedance protection
G4	Photovoltaic leakage current protection
G5	Phase-lacking protection at power grid side
q0	Indoor fan bus low-voltage protection
q1	Indoor fan bus high-voltage protection
q2	Indoor fan AC current protection
q3	Indoor fan IPM protection
q4	Indoor fan PFC protection
q5	Indoor fan Startup failure
q6	Indoor fan phase-sequence protection
q7	Indoor fan driver reset protection
q8	Indoor fan over-current protection
q9	Indoor fan power protection
qA	Indoor fan driver current error
qb	Indoor fan driver out-of-step protection
qC	Master control and indoor fan driver communication error
qd	Indoor fan driver module high temperature protection
qE	Indoor fan driver module sensor error

## Wired Controller XK117

---

Error Code	Error
qF	Indoor fan driver memory chip error
qH	Indoor fan charging loop error
qL	Indoor fan input voltage error
qo	Indoor fan electric box sensor error
qP	Indoor fan zero-crossing protection
dc	Suction temperature sensor error
CA	Evaporator inlet pipe temperature sensor error
Cb	Evaporator outlet pipe temperature sensor error
A5	Condenser inlet pipe temperature sensor error
e1	High pressure sensor error
e3	Low pressure sensor error
AL	Outdoor fan bus low-voltage protection
AH	Outdoor fan bus high-voltage protection
AA	Outdoor fan AC current protection
A1	Outdoor fan IPM protection
AF	Outdoor fan PFC protection
Ac	Outdoor fan Startup failure
Ad	Outdoor fan phase-sequence protection
A0	Outdoor fan driver reset protection
UL	Outdoor fan over-current protection
UP	Outdoor fan power protection
AE	Outdoor fan driver current error
AJ	Outdoor fan driver out-of-step protection
A6	Master control and outdoor fan driver communication error

## Wired Controller XK117

Error Code	Error
A8	Outdoor fan driver module high temperature protection
A9	Outdoor fan driver module sensor error
An	Outdoor fan driver memory chip error
AU	Outdoor fan charging loop error
AP	Outdoor fan input voltage error
Ar	Outdoor fan electric box sensor error
U9	Outdoor fan zero-crossing protection



Air comfort for all

U.S. CONTACT INFORMATION TRADEWINDS, LLC

E-mail: [info@twciimate.com](mailto:info@twciimate.com)

Contractor Support: 888-850-7928 | Mon-Fri 8 AM - 5 PM EST

[GREECOMFORT.COM](http://GREECOMFORT.COM)